

AKUSTIK 1 + SYLOMER® ACOUSTIC HANGERS INSTALLATION


WOODEN CEILINGS

AMC Mekanocaucho


1: FIX ACOUSTIC HANGERS TO CEILING USING APPROPRIATE FIXINGS



2: ACOUSTIC HANGERS FIXED

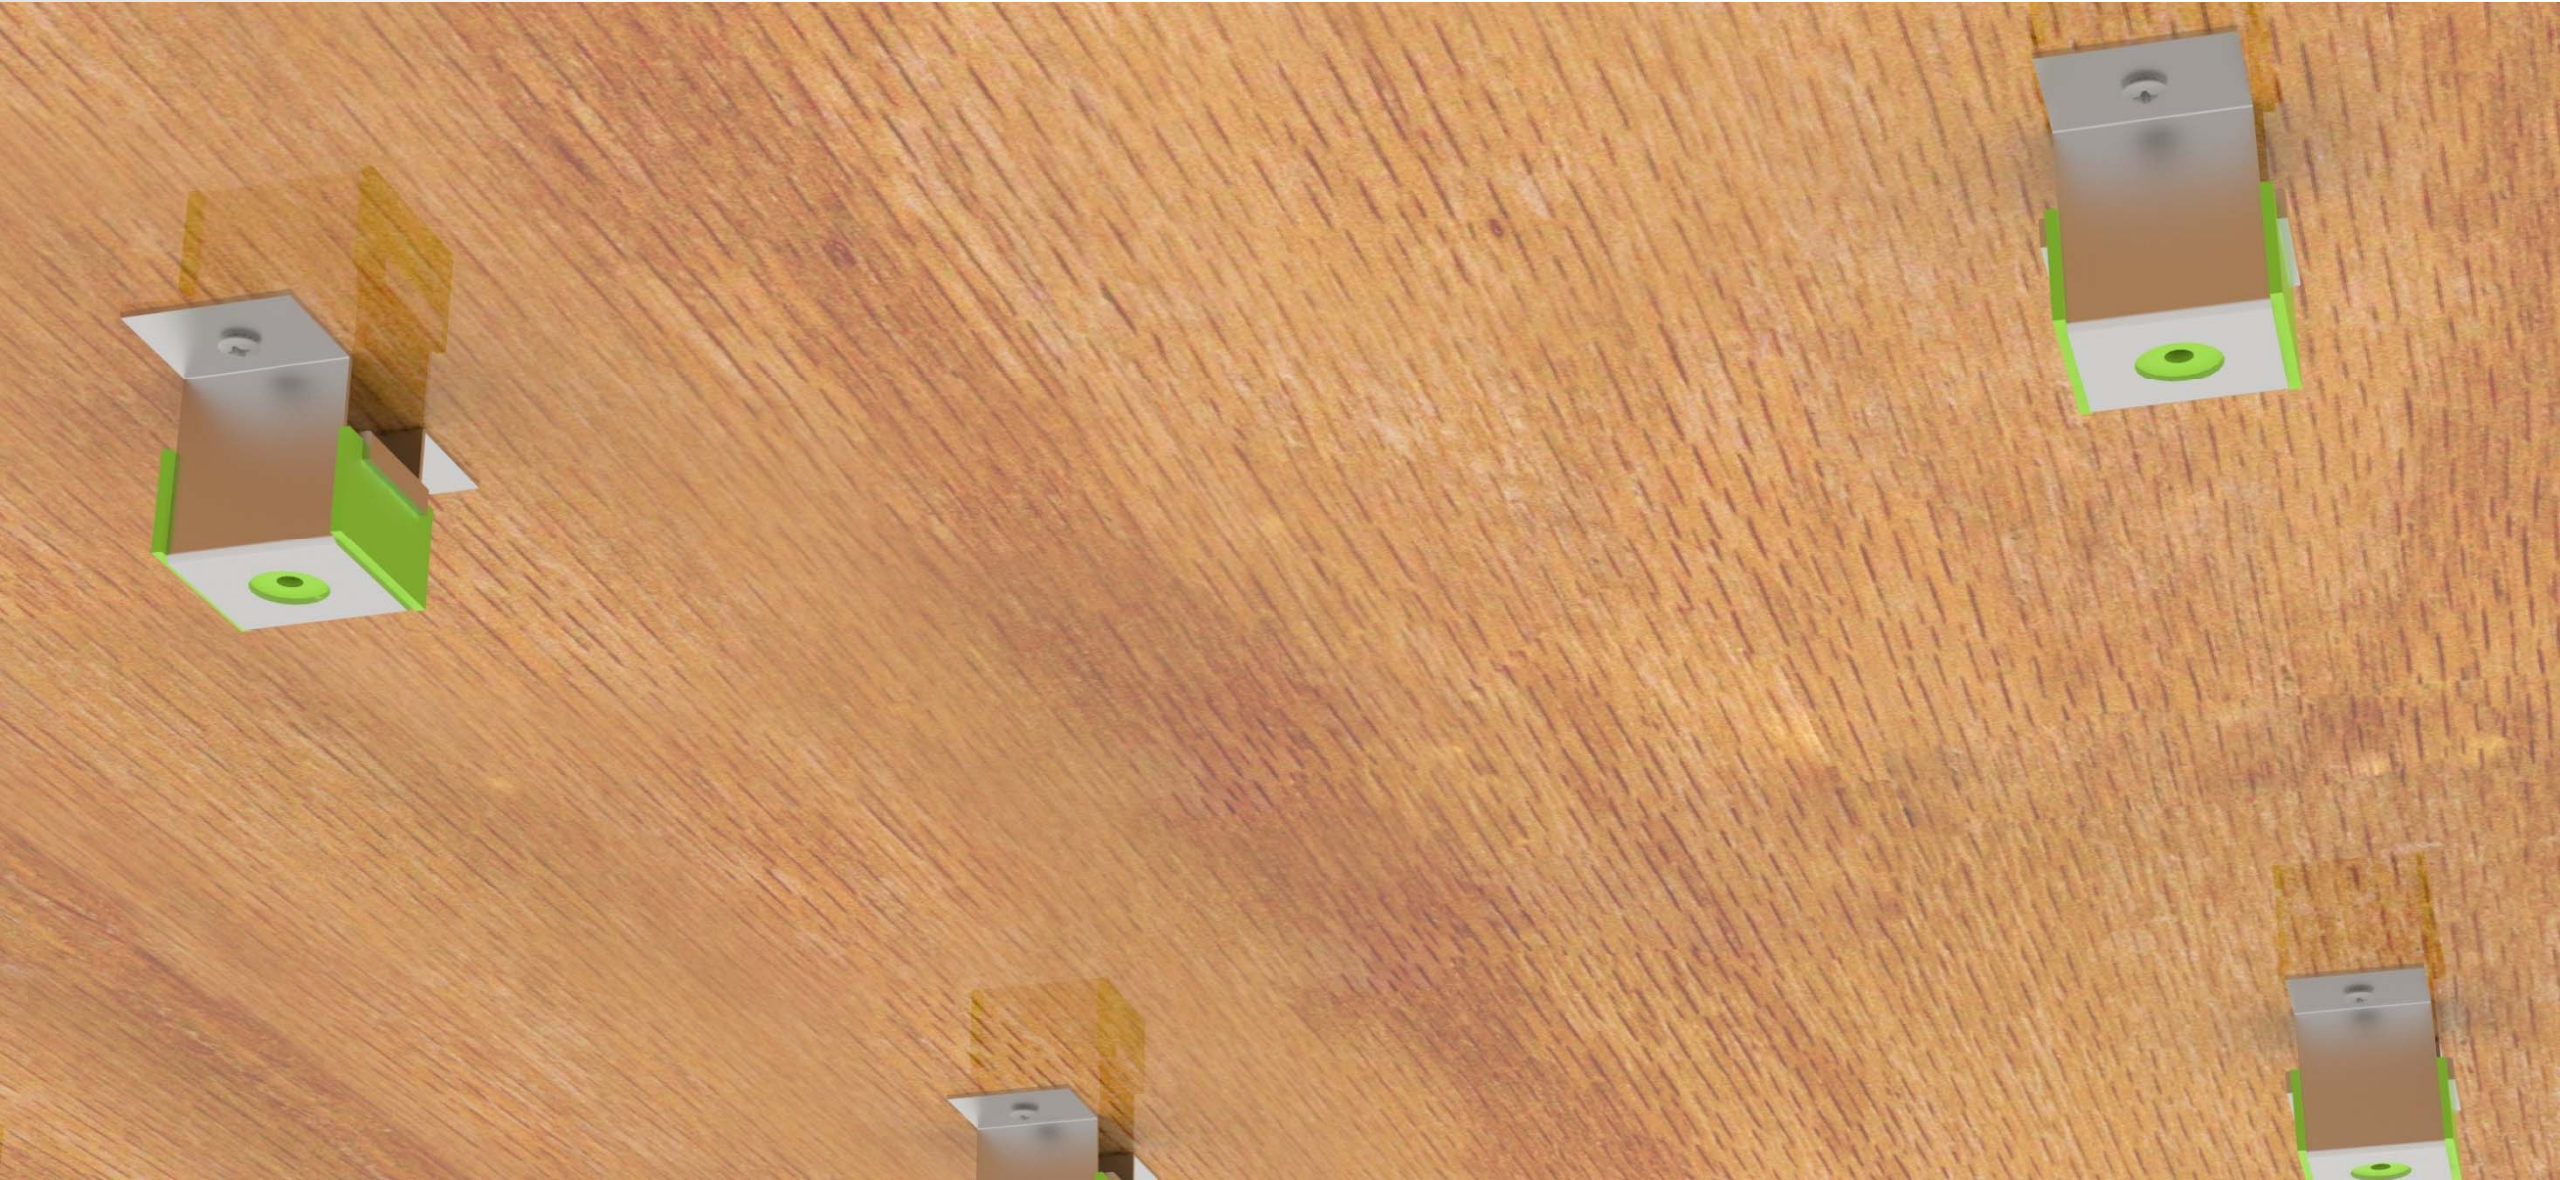


3: SCREW STUDBOLTS INTO THE THREADED NUT HOUSED WITHIN THE ACOUSTIC HANGER

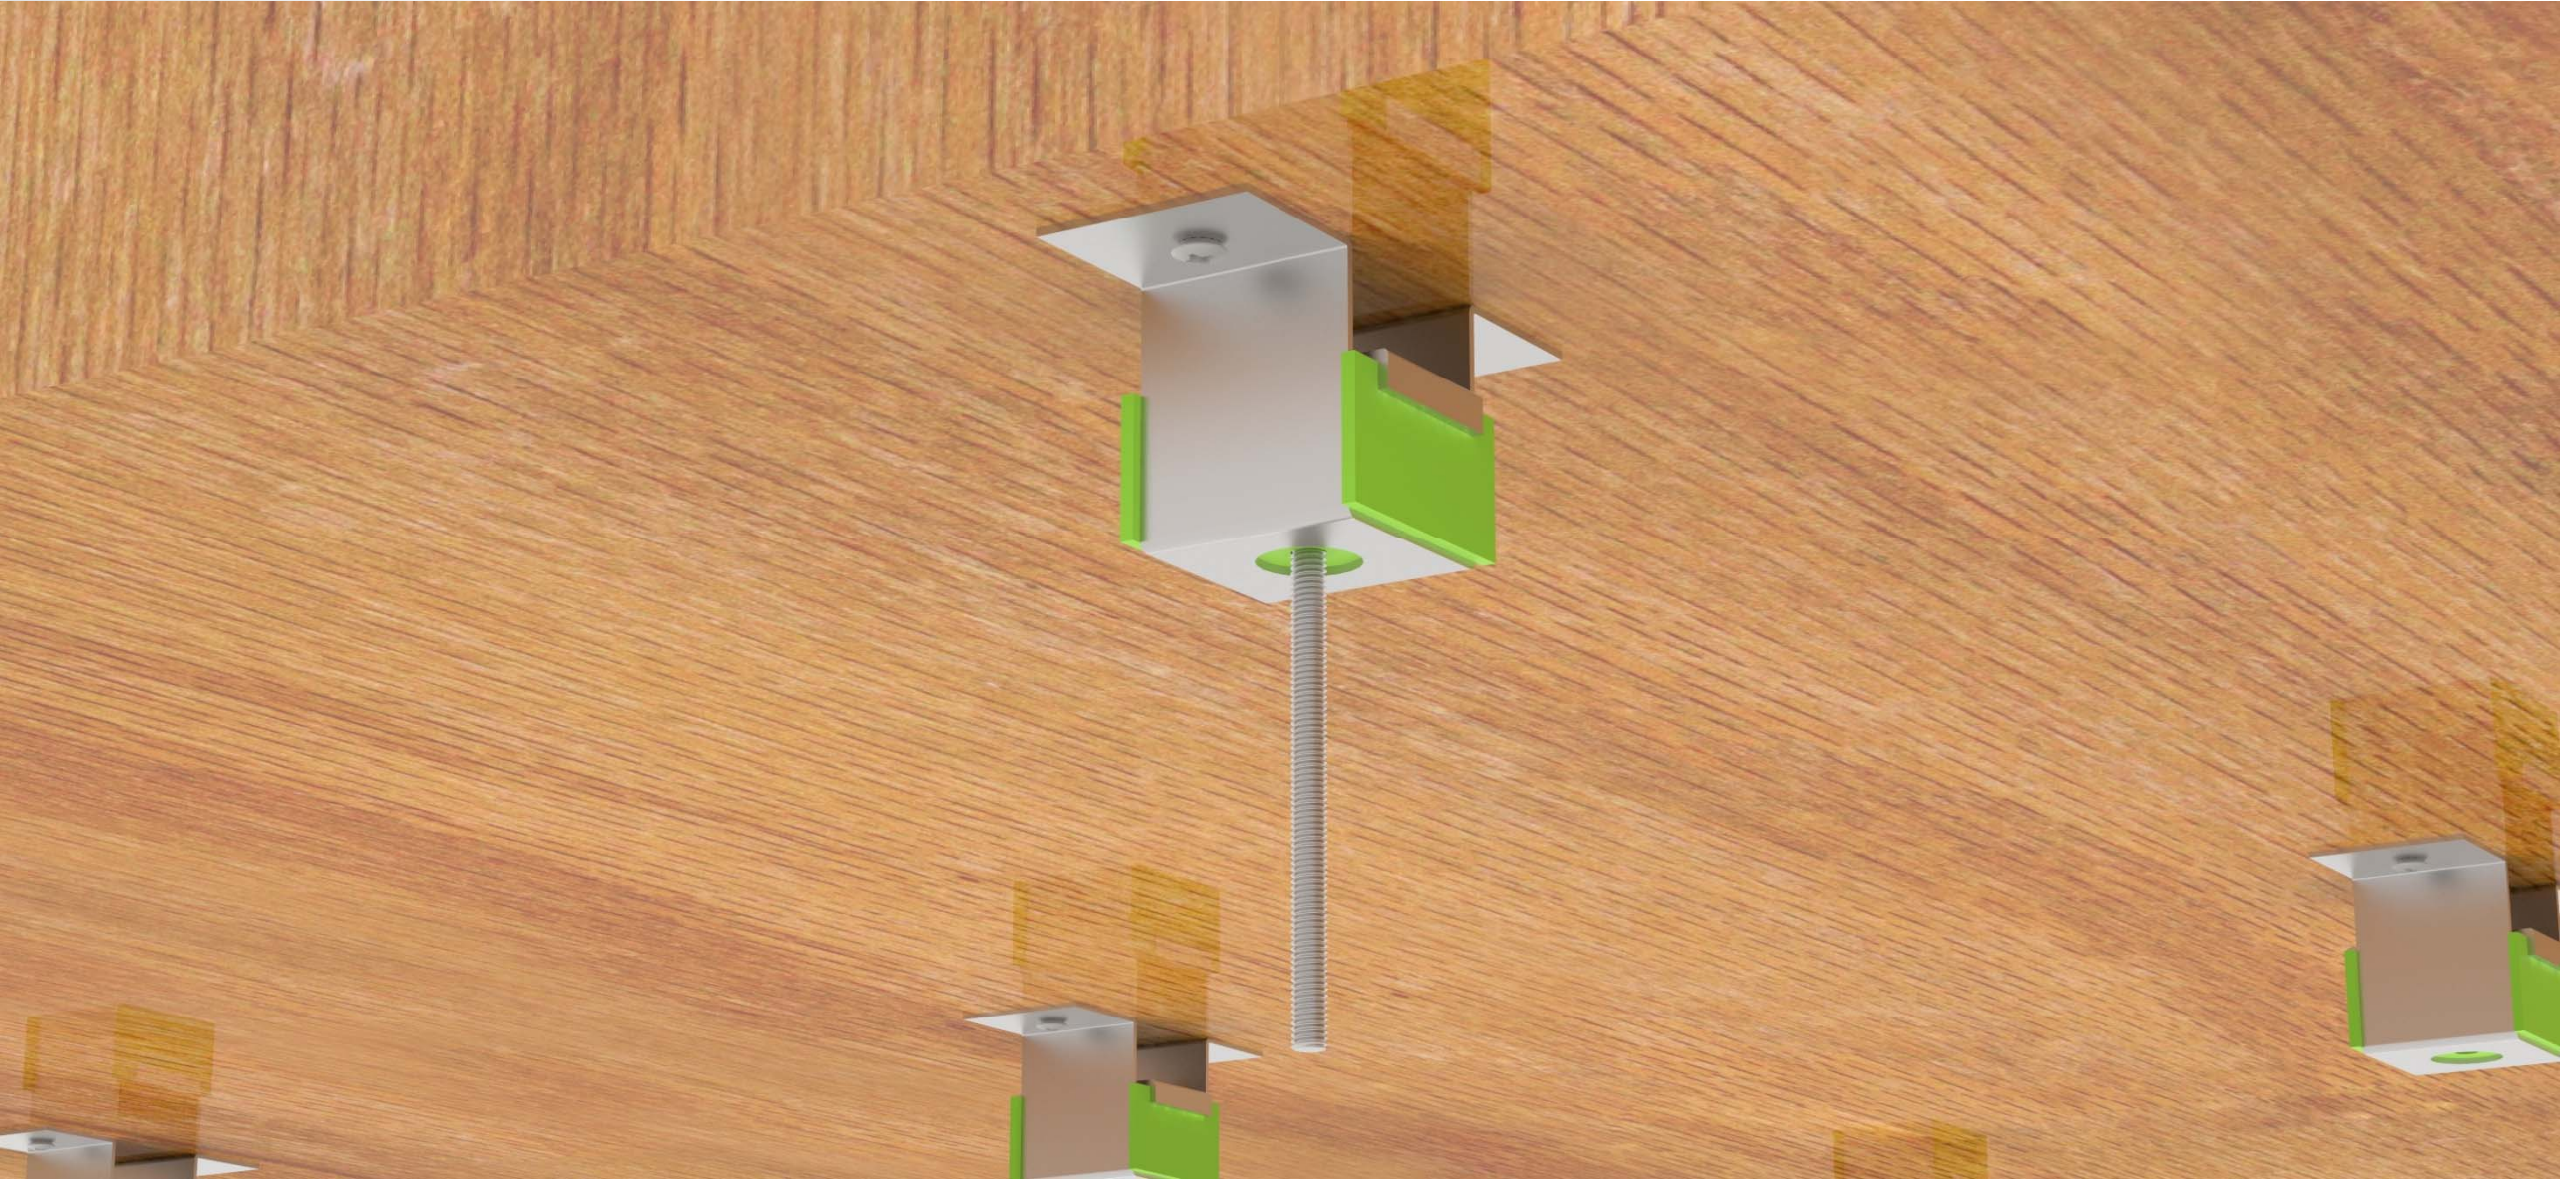


4: ATTACH THE PROFILES TO THE END OF THE STUDBOLT




5: CHECK LEVELS OF THE HANGERS USING A LASER ALIGNMENT TOOL

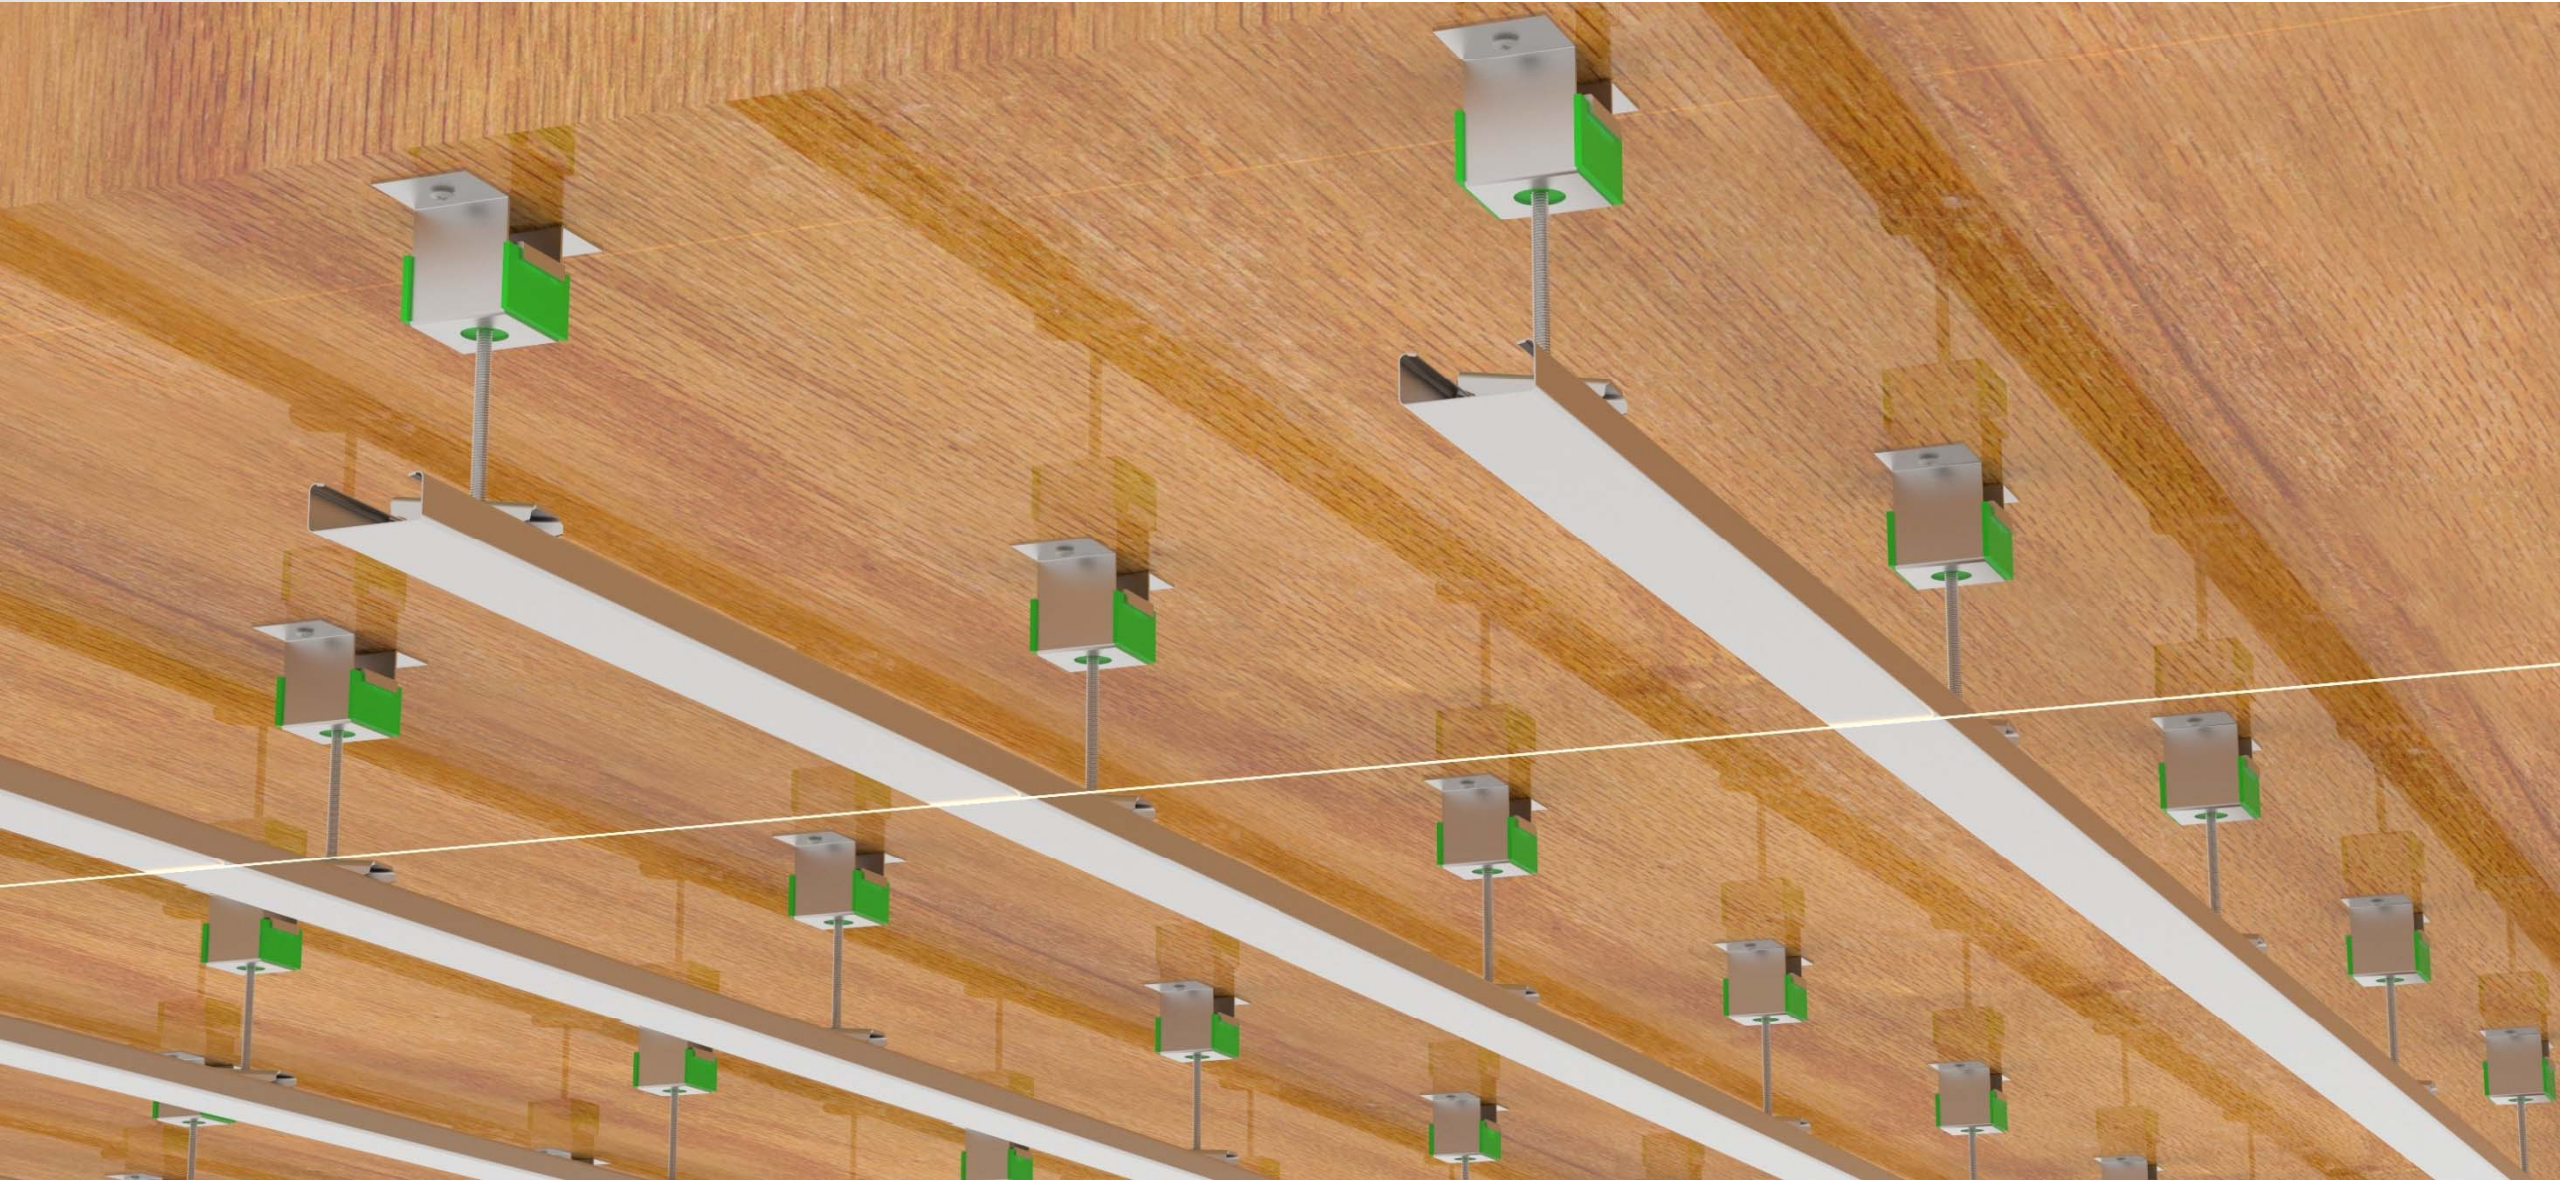


6: FIX STUDBOLTS WITH LOCKNUTS

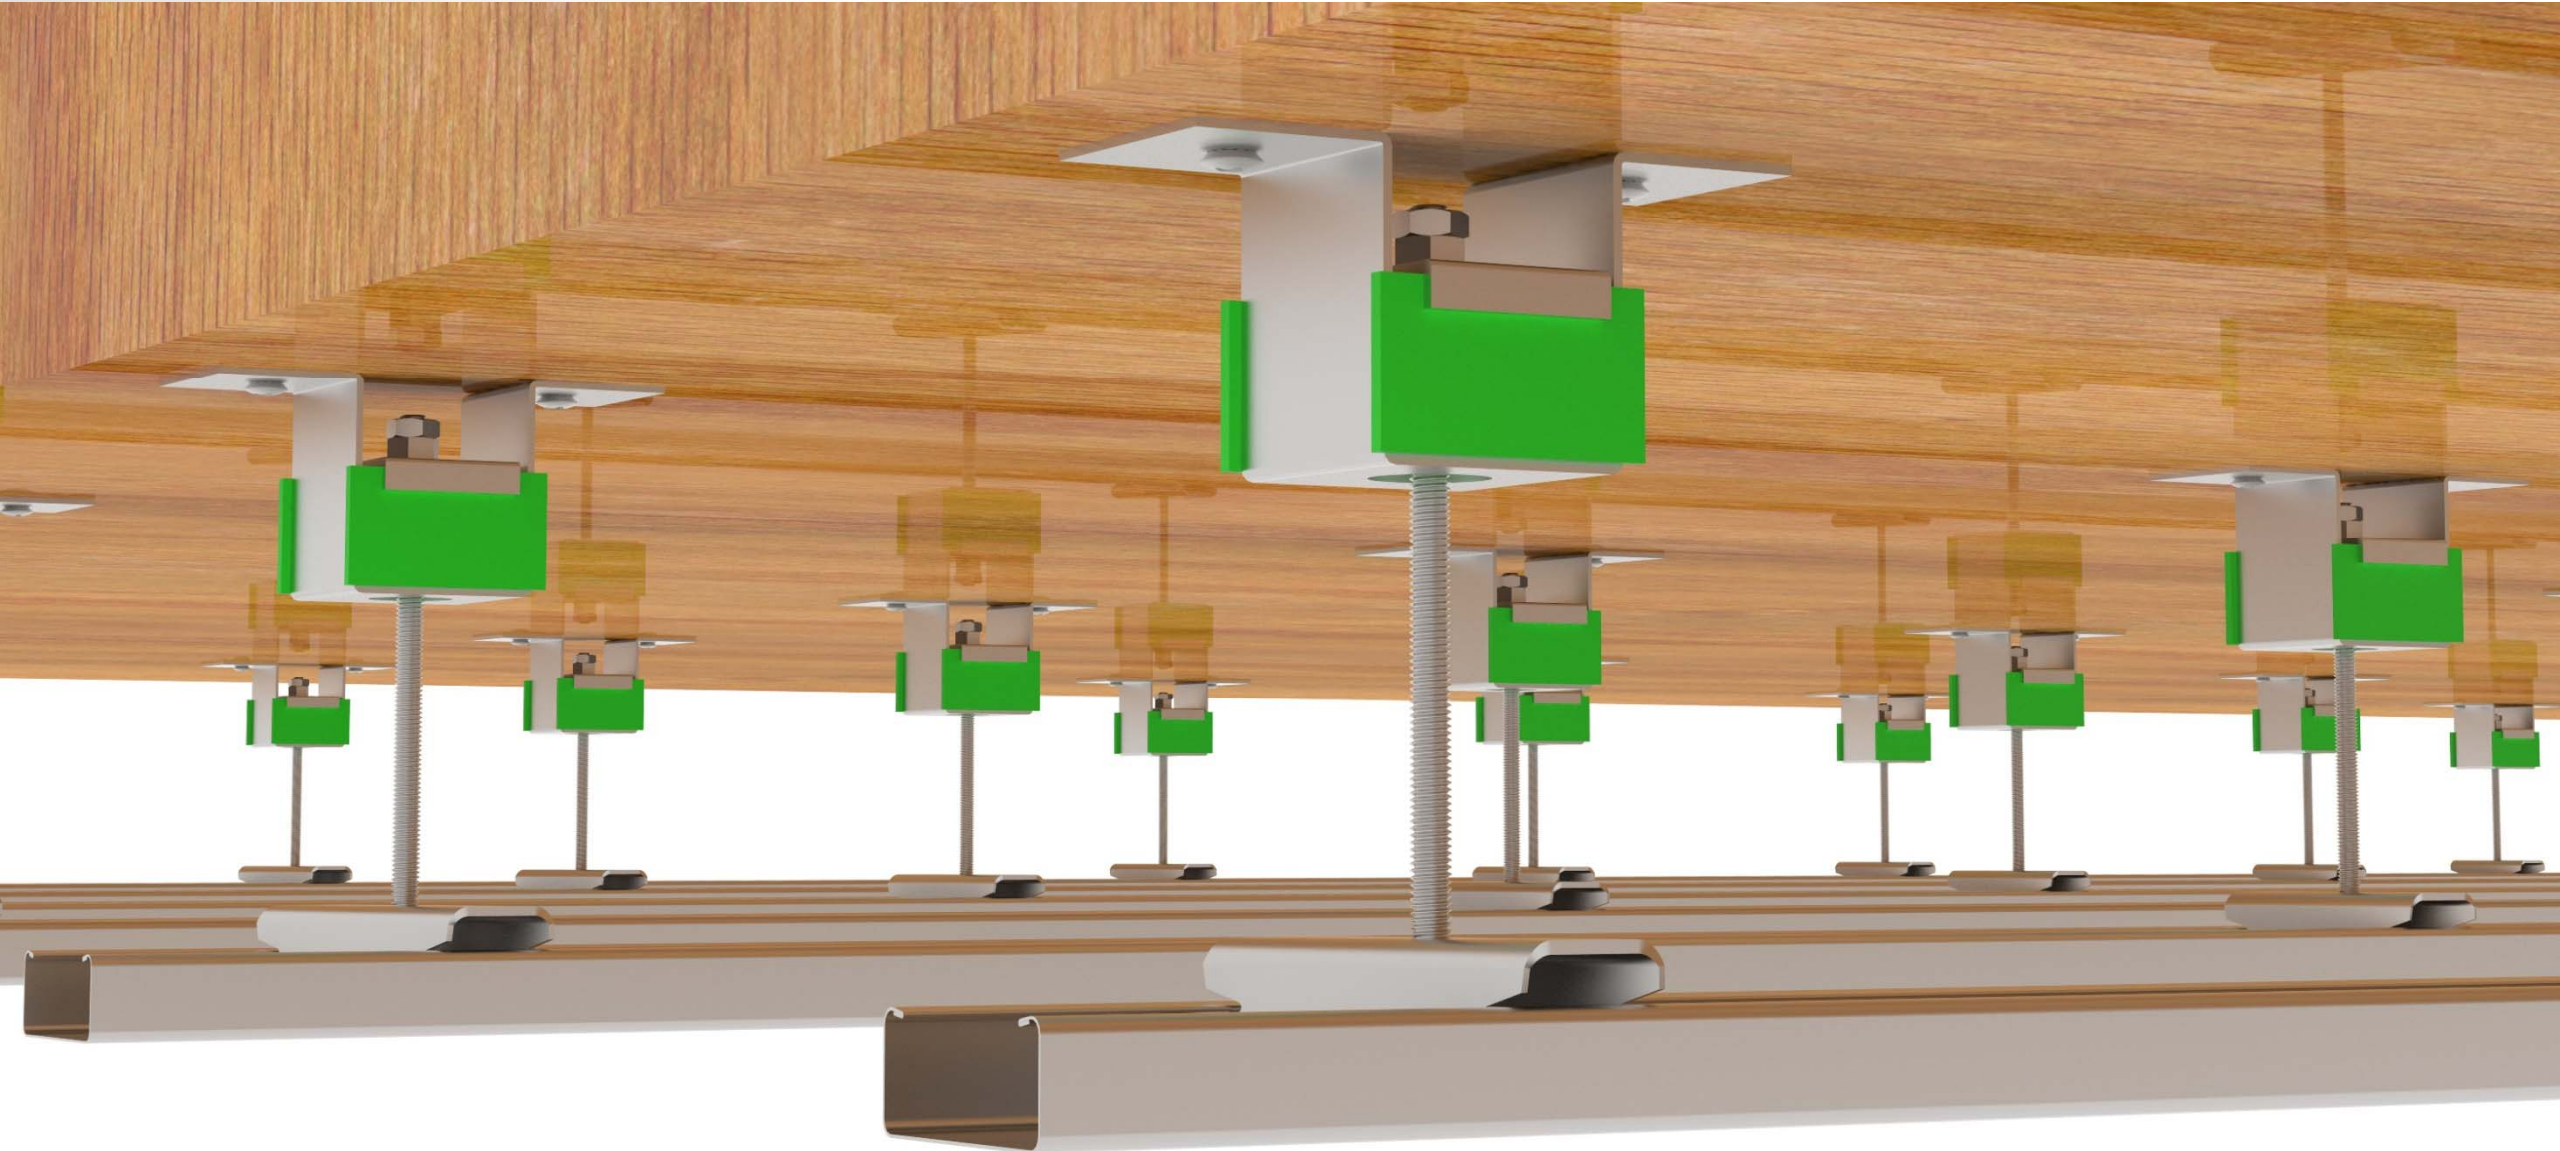

7: POSITION PLASTERBOARDS IN PLACE

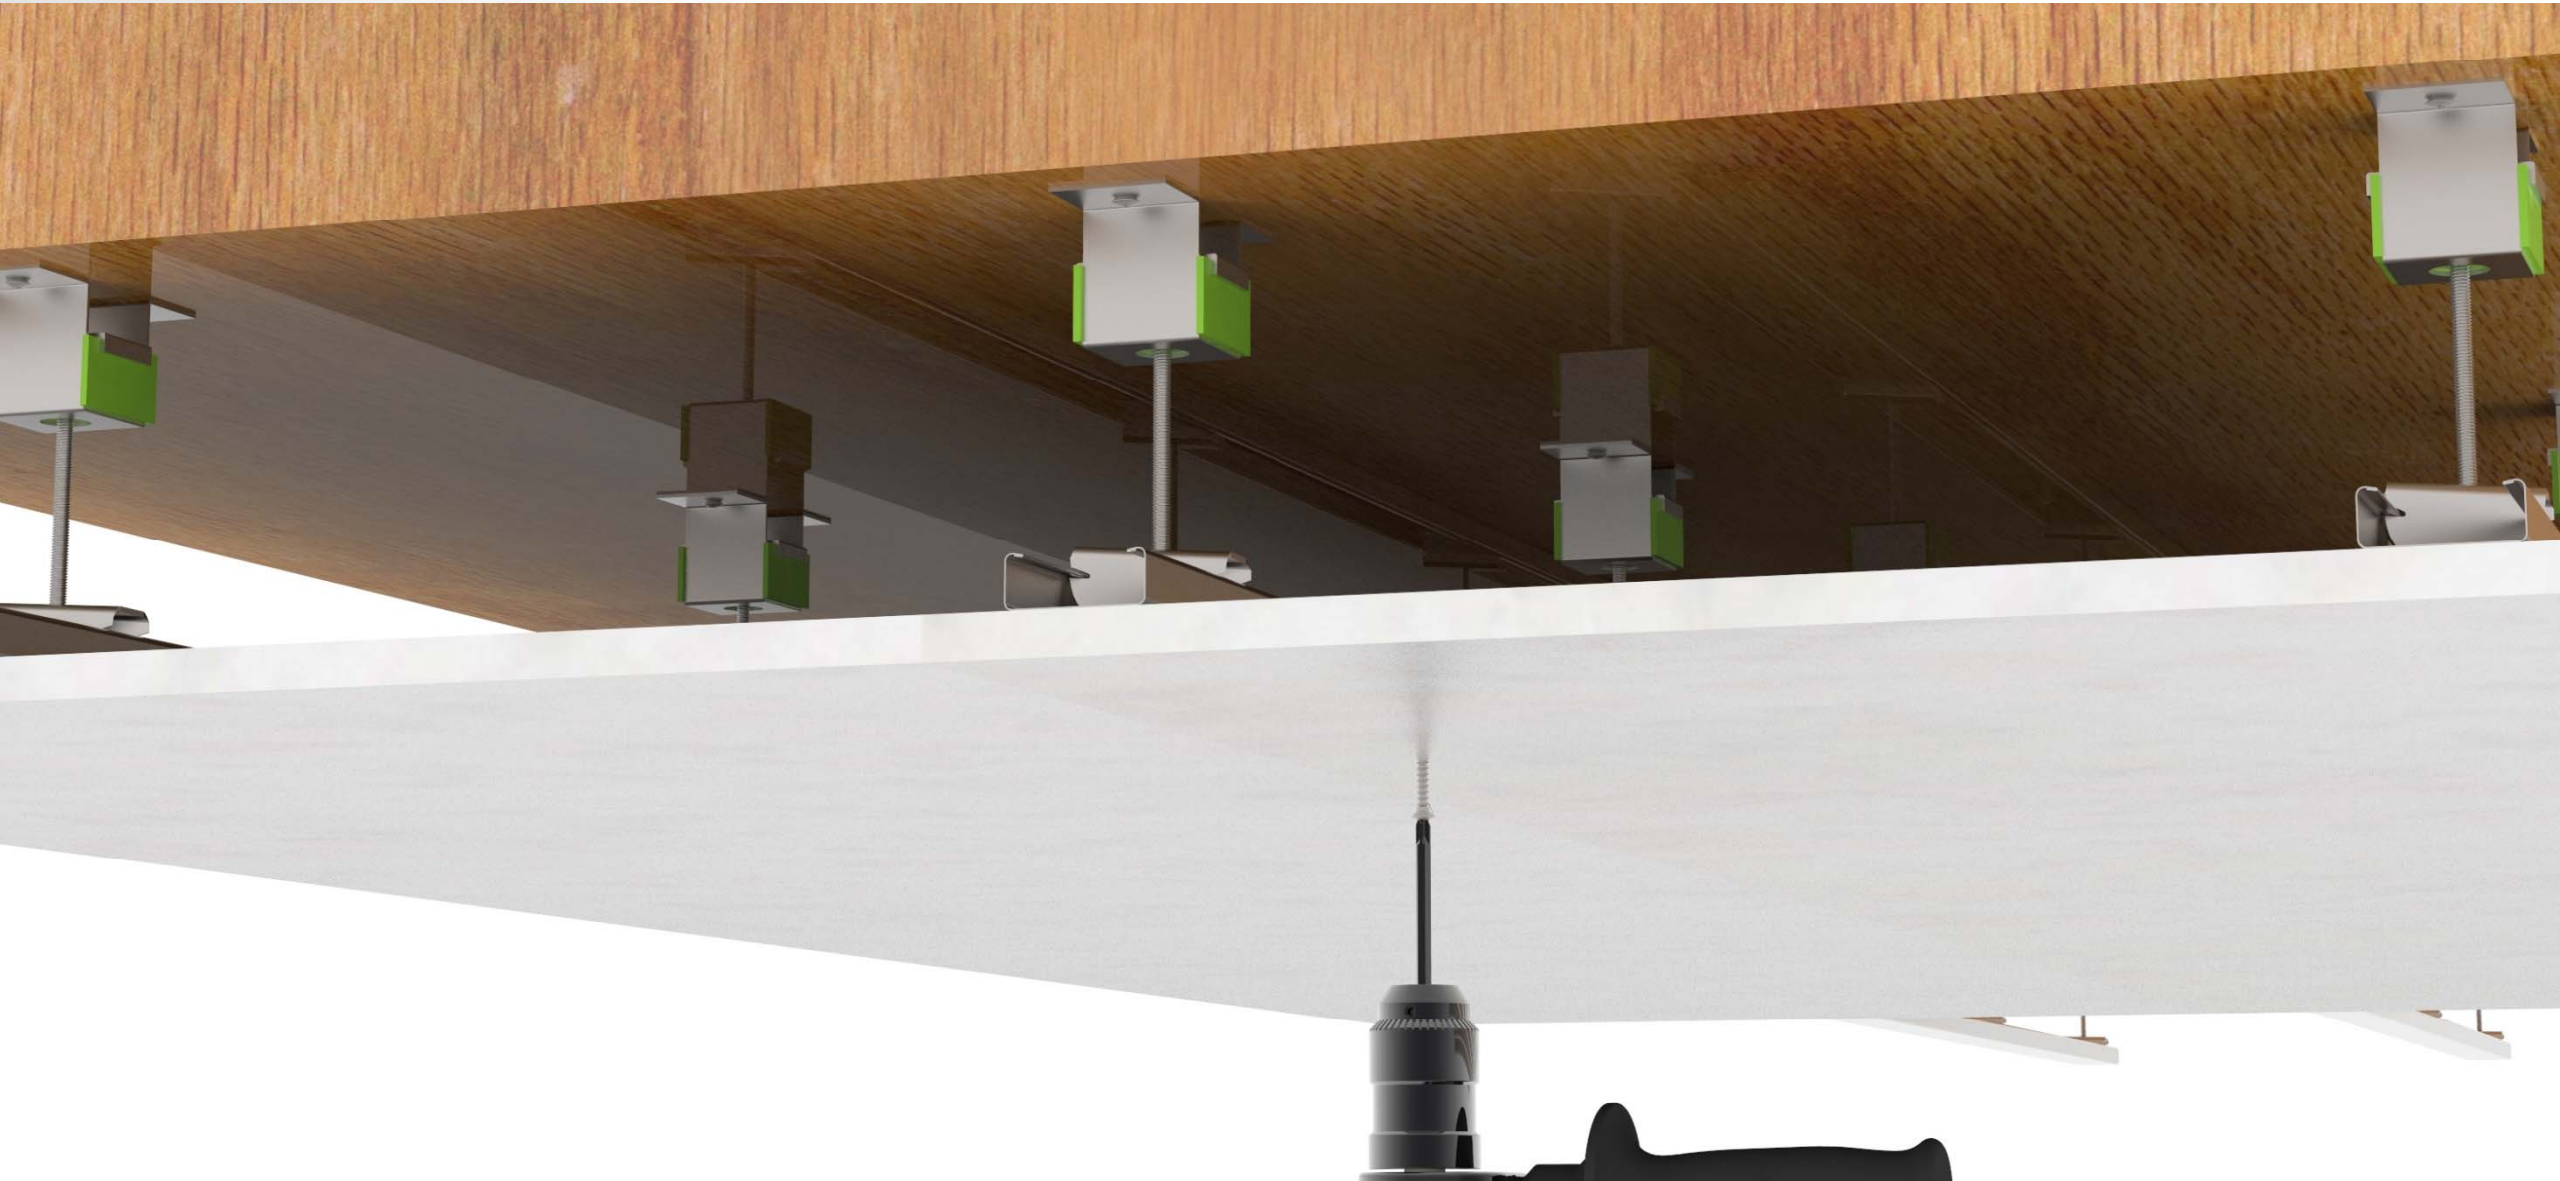

8: PLASTERBOARDS FIXED

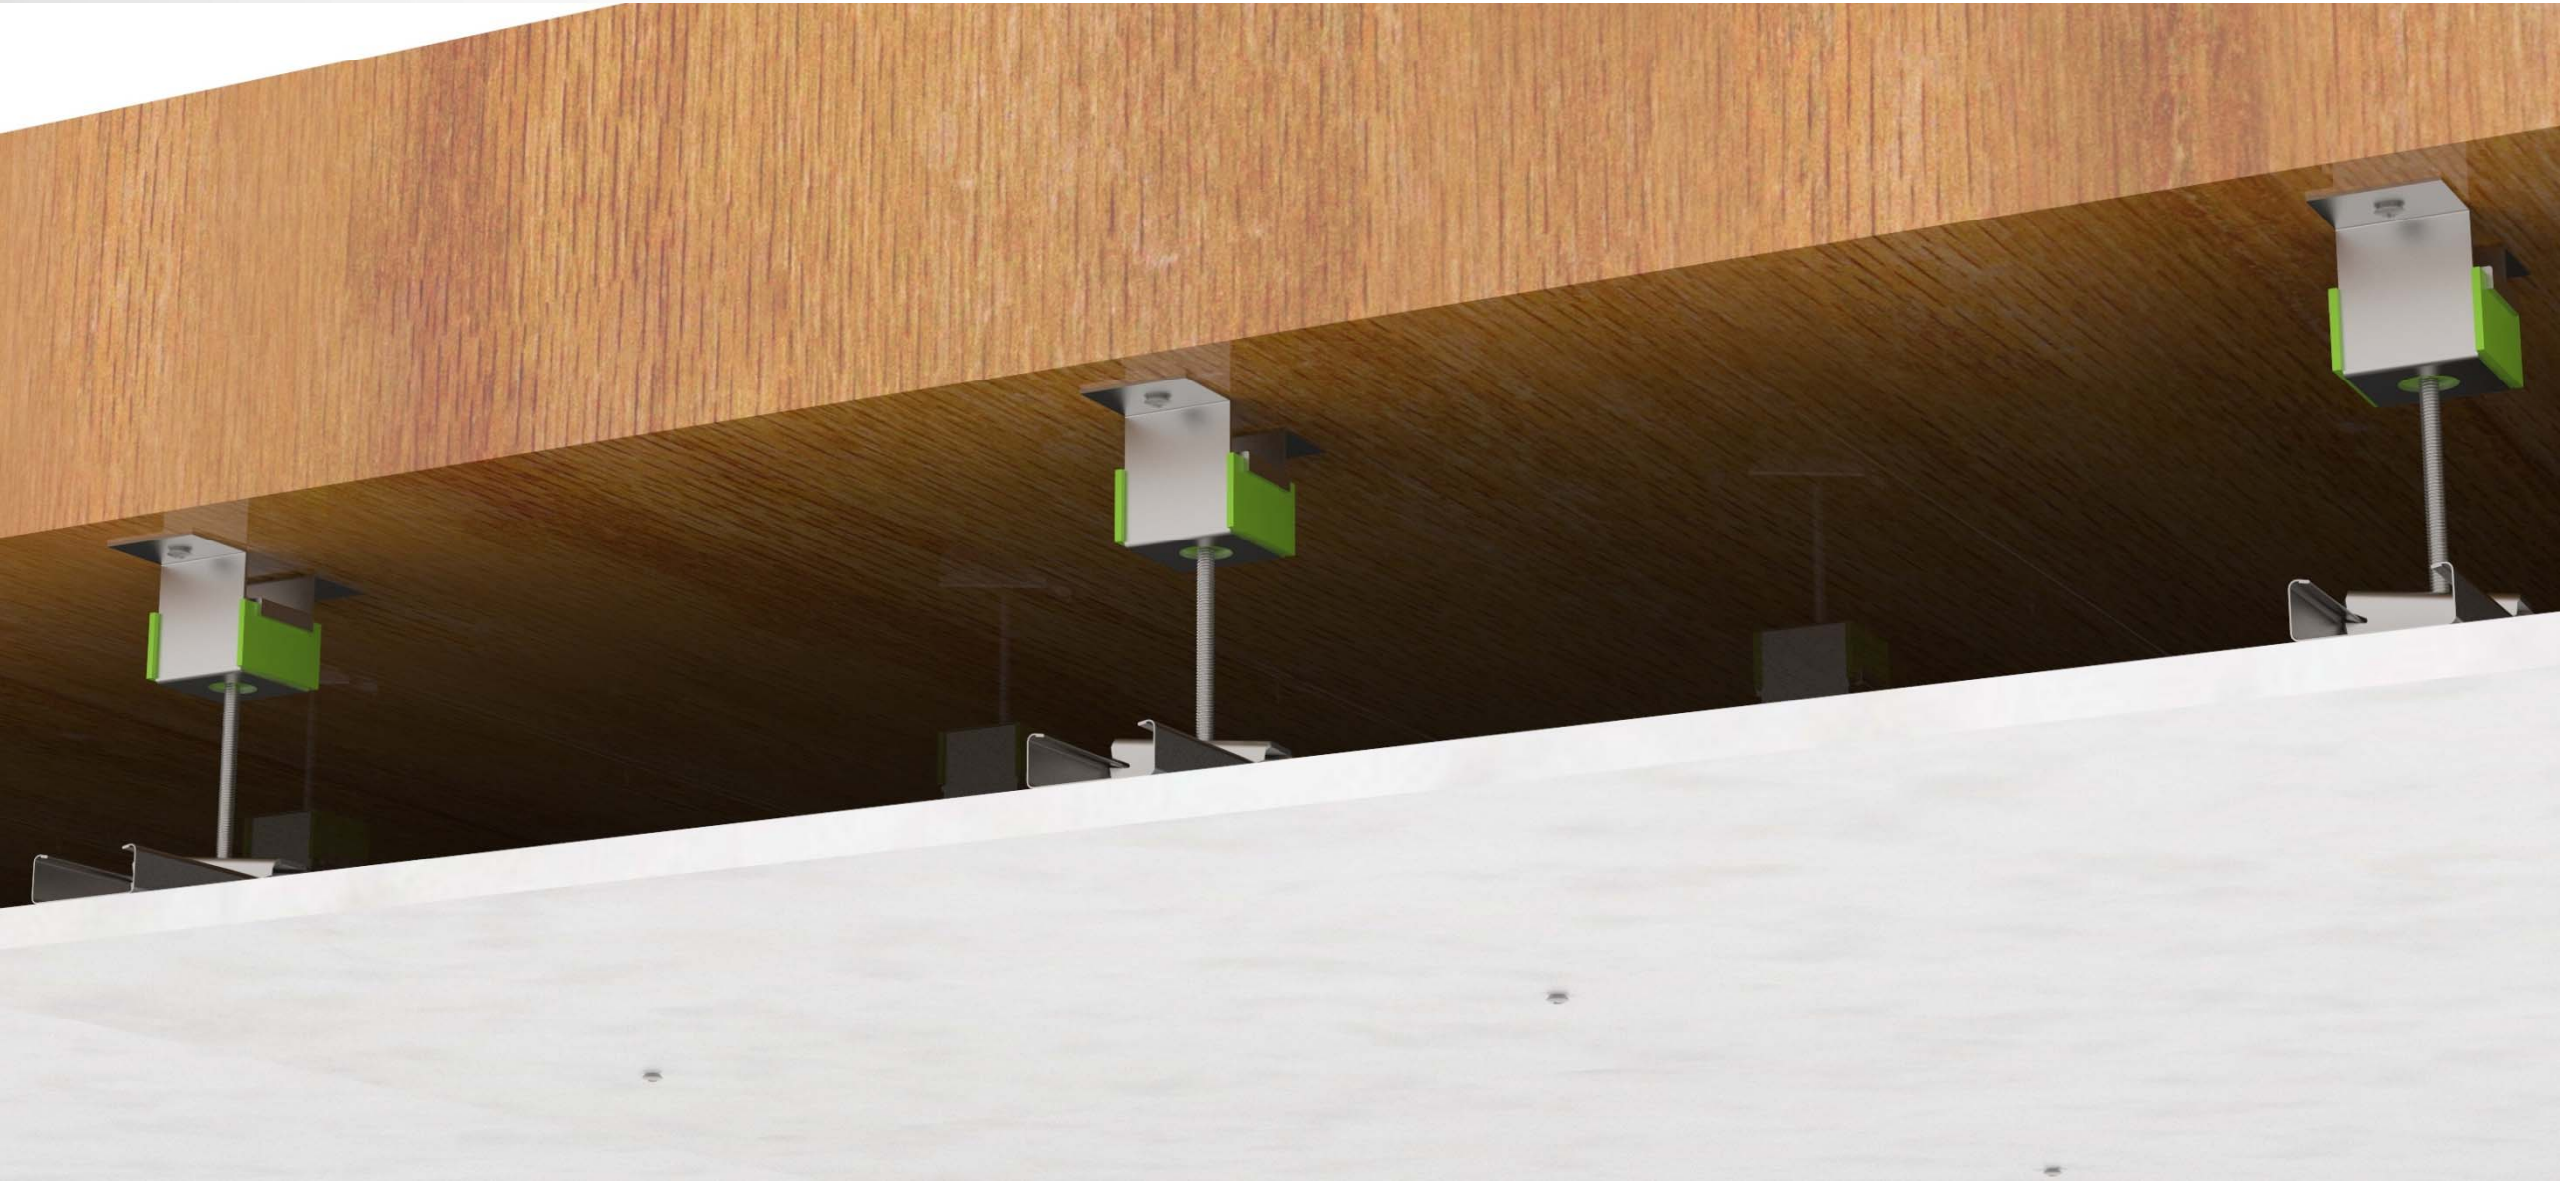

8: PLASTERBOARDS FIXED



FREE TECHNICAL SUPPORT AVAILABLE UPON REQUEST

