


AKUSTIK 3 + SYLOMER®
ACOUSTIC HANGERS
INSTALLATION
AMC Mekanocaucho


1: FIX THREADED WALL PLUGS TO THE CEILING

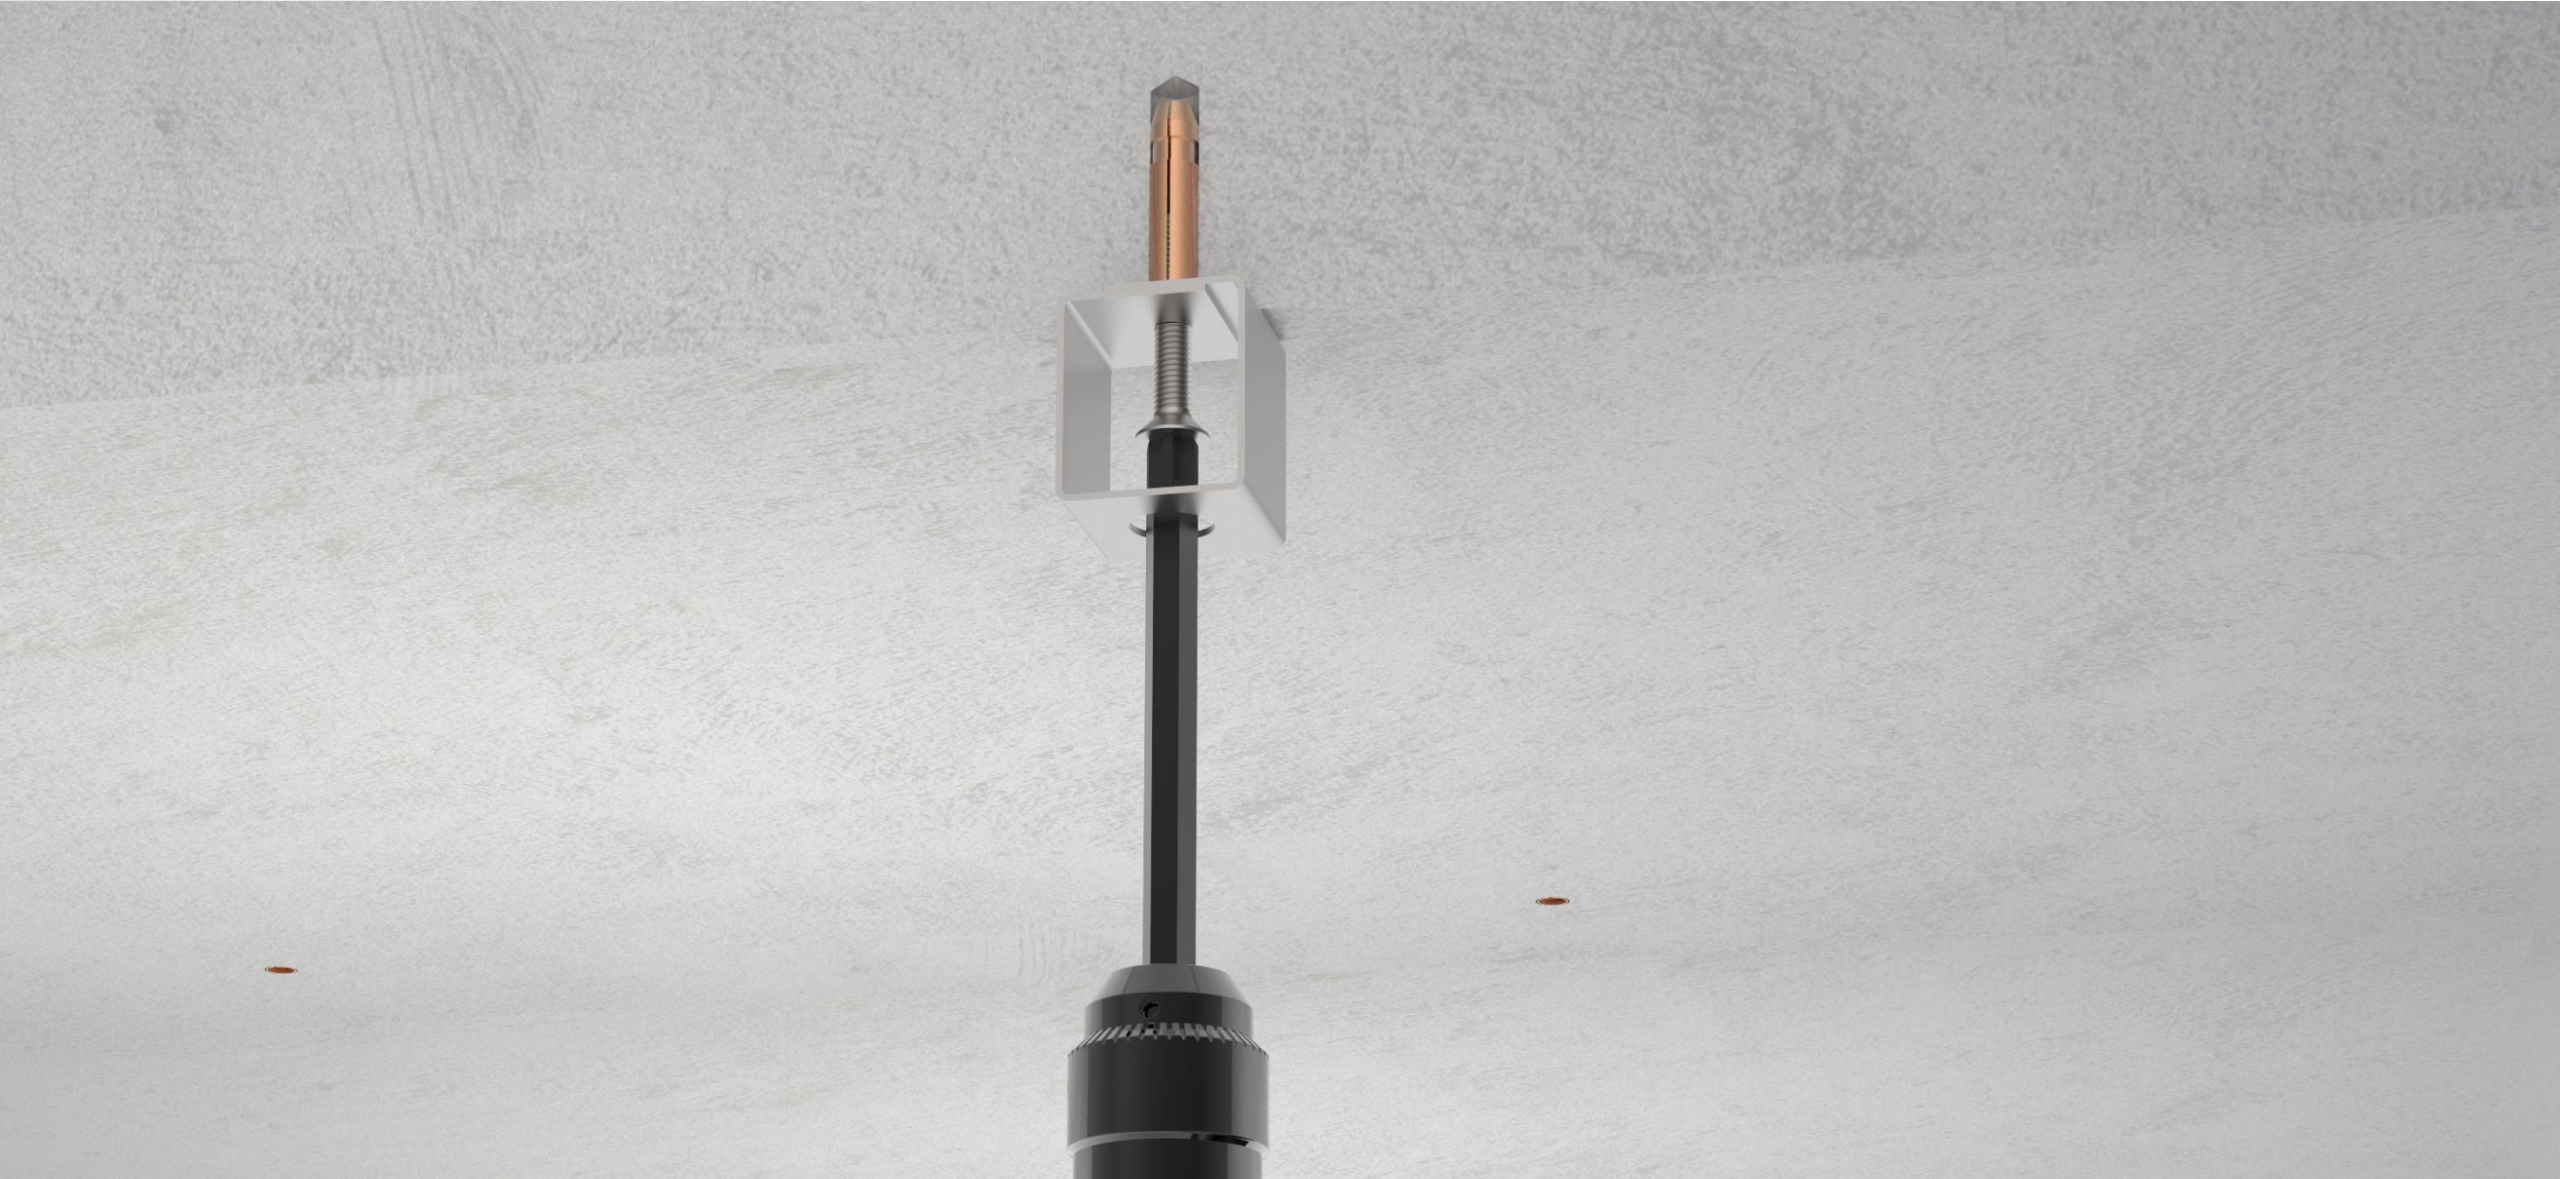


2: FIX ACOUSTIC HANGERS TO CEILING USING APPROPRIATE FIXINGS




3: ASSEMBLE ACOUSTIC HANGER

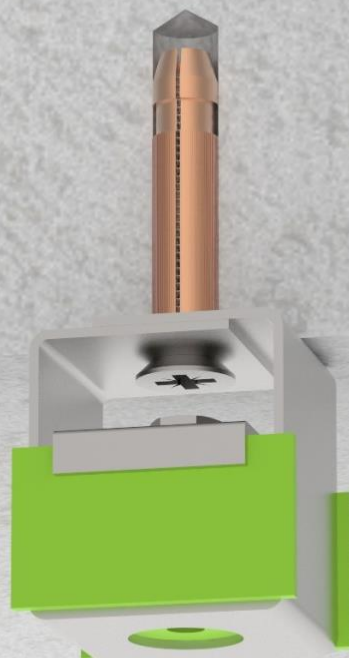

4: SCREW STUDBOLTS INTO THE THREAD NUT HOUSED WITHIN THE ACOUSTIC HANGER

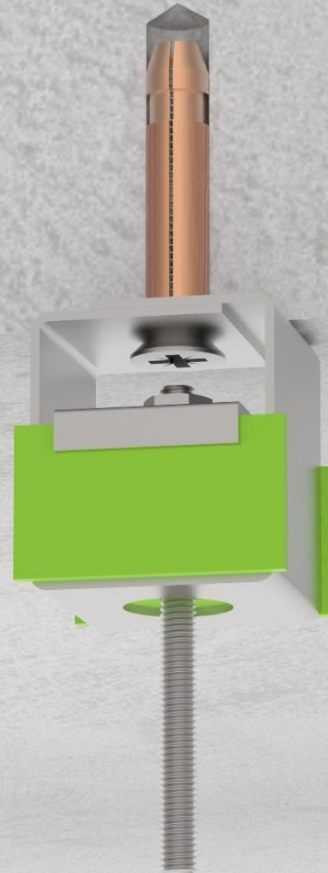


5: ATTACH THE PROFILES TO THE END OF THE STUDBOLTS

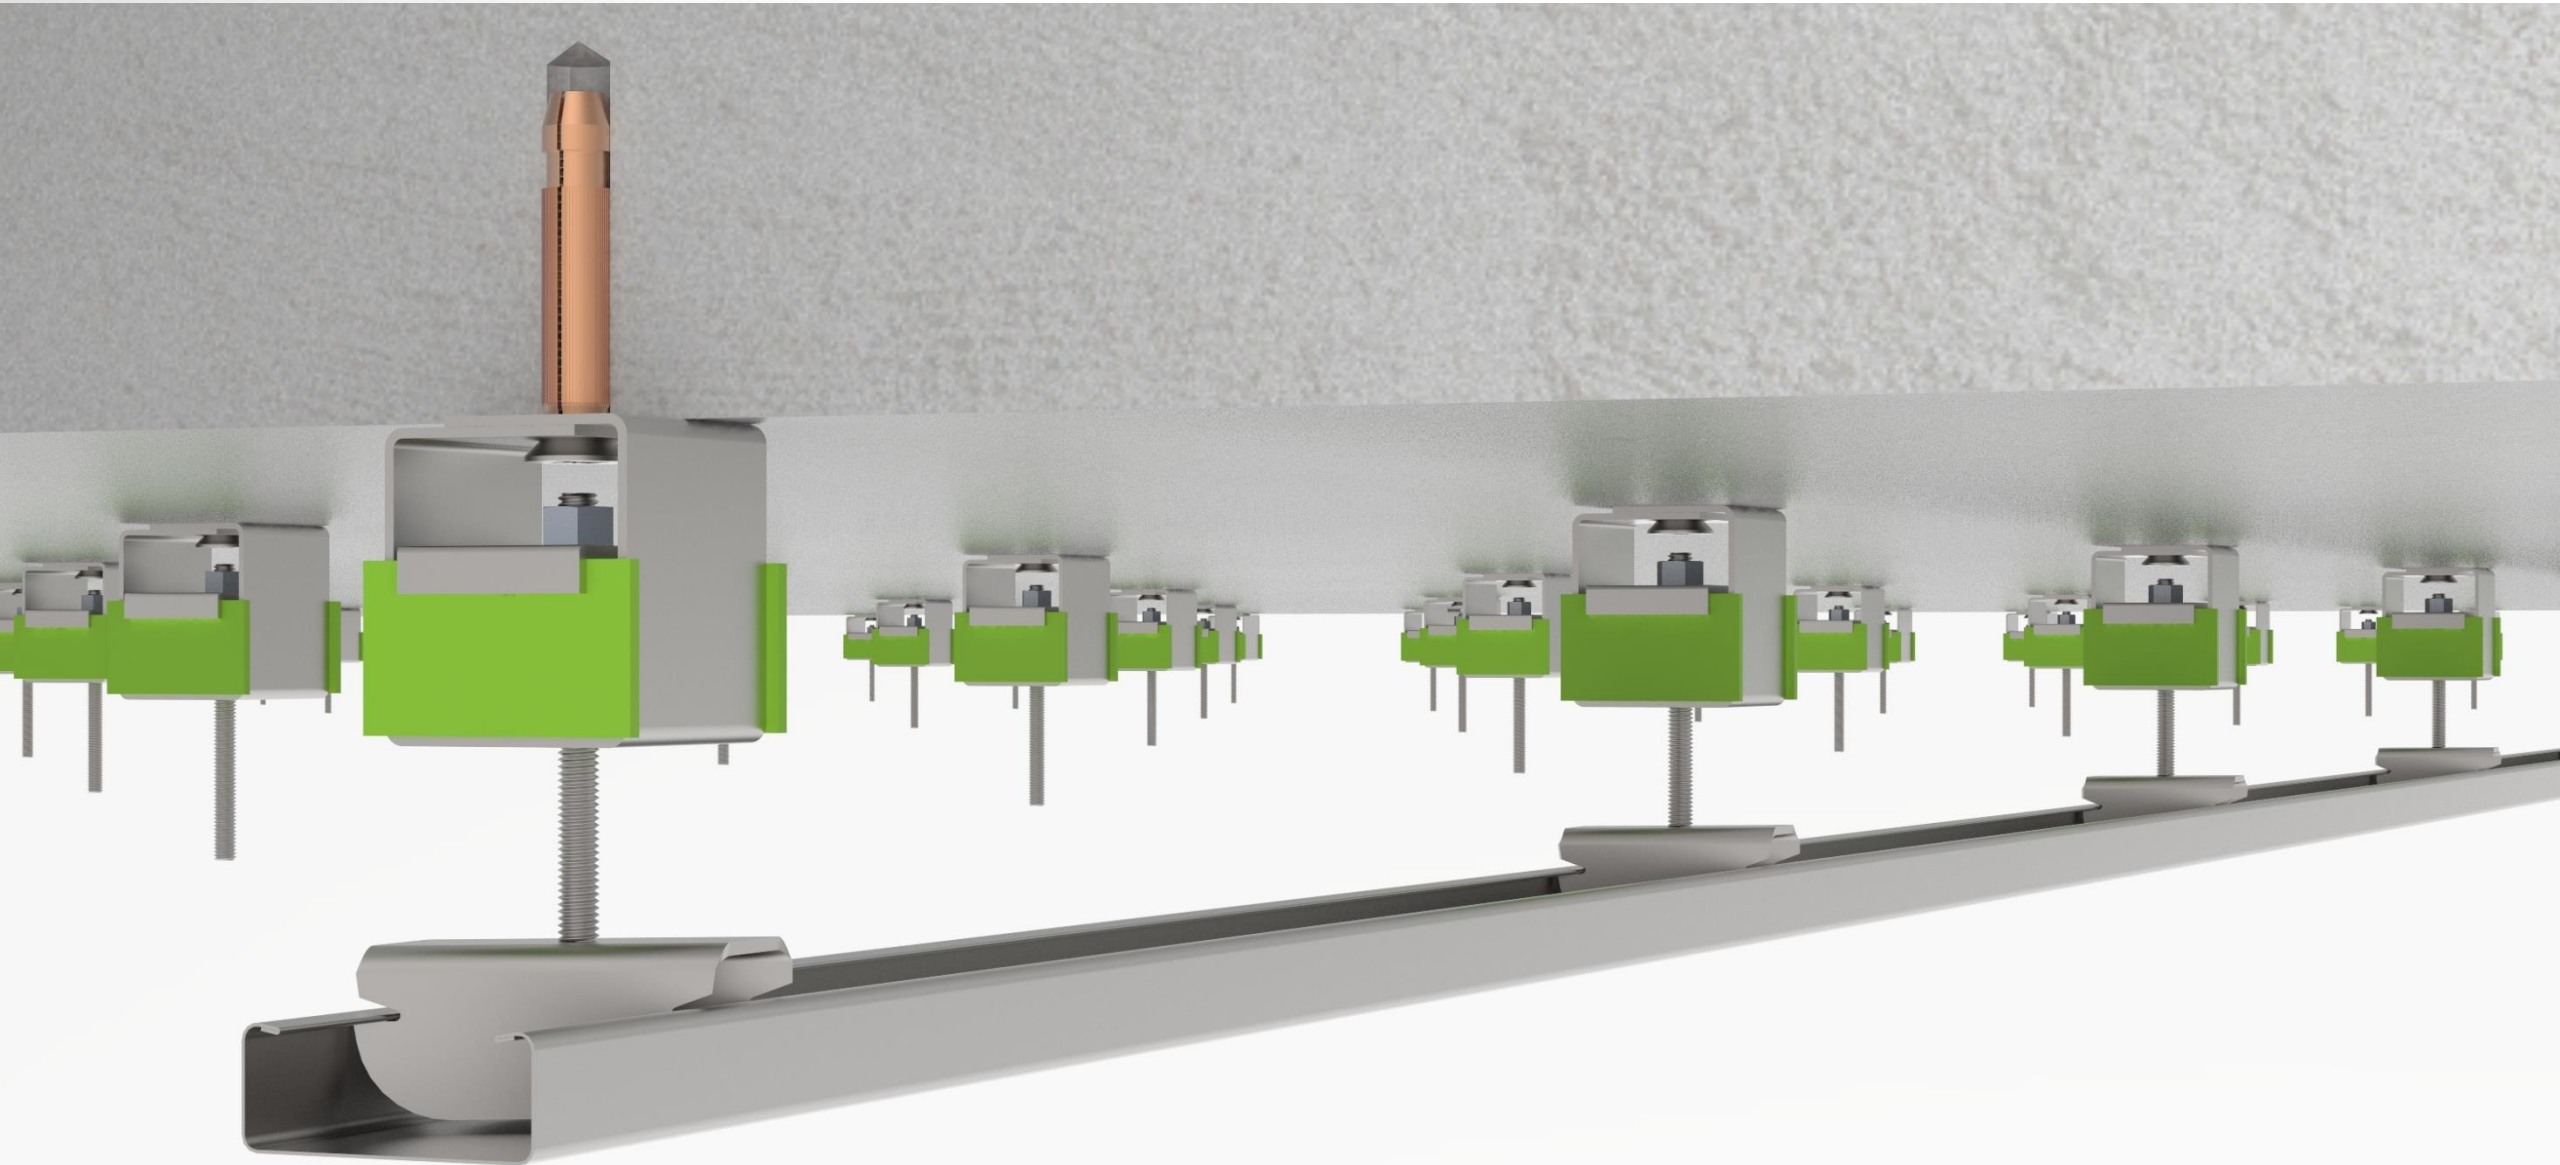

6: CHECK LEVELS OF THE HANGERS USING A LASER ALIGNMENT TOOL



7: FIX STUDBOLTS WITH LOCKNUTS

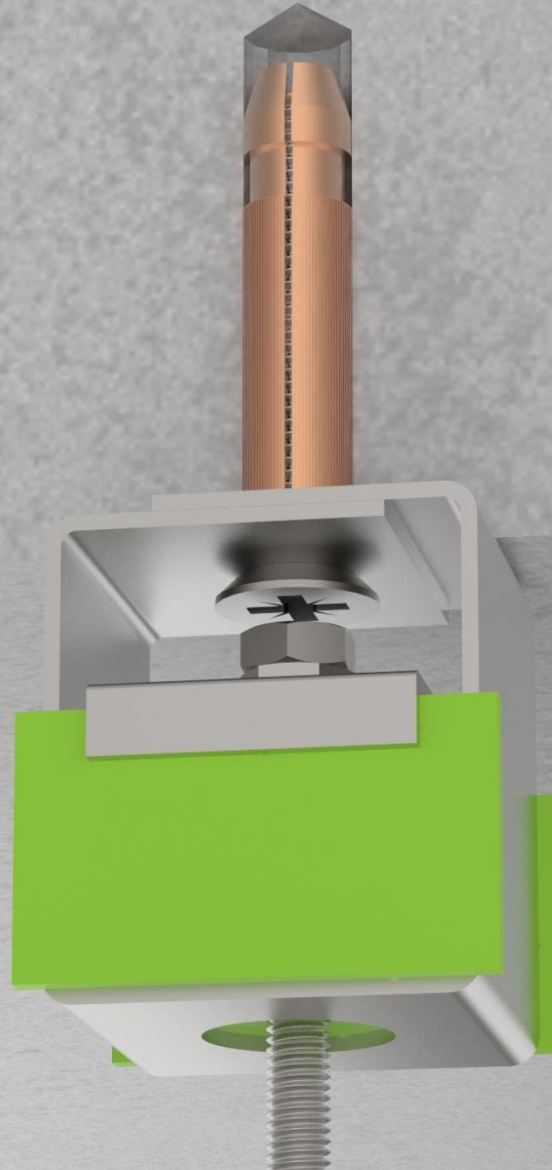

8: POSITION PLASTERBOARDS IN PLACE



9: PLASTERBOARDS FIXED



9: PLASTERBOARDS FIXED



FREE TECHNICAL SUPPORT AVAILABLE UPON REQUEST

