



INSTALLATION OF ST + SYLOMER®
AMC Mekanocaucho


1: PLACE THREADED PLUGS IN THE SLAB



2: PLACE THREADED RODS IN THE PLUGS




3: FIX THE HANGER TO THE RODS

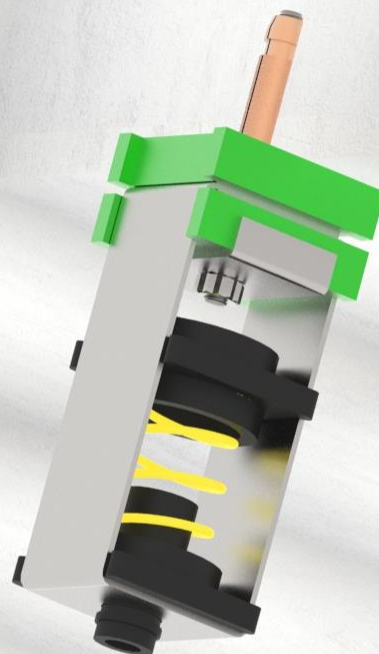


Max compresión of the
Sylomer pads = 2mm

4: ADD THE RODS UNDER THE HANGERS


(can be done before fixing the hangers to the top rods)

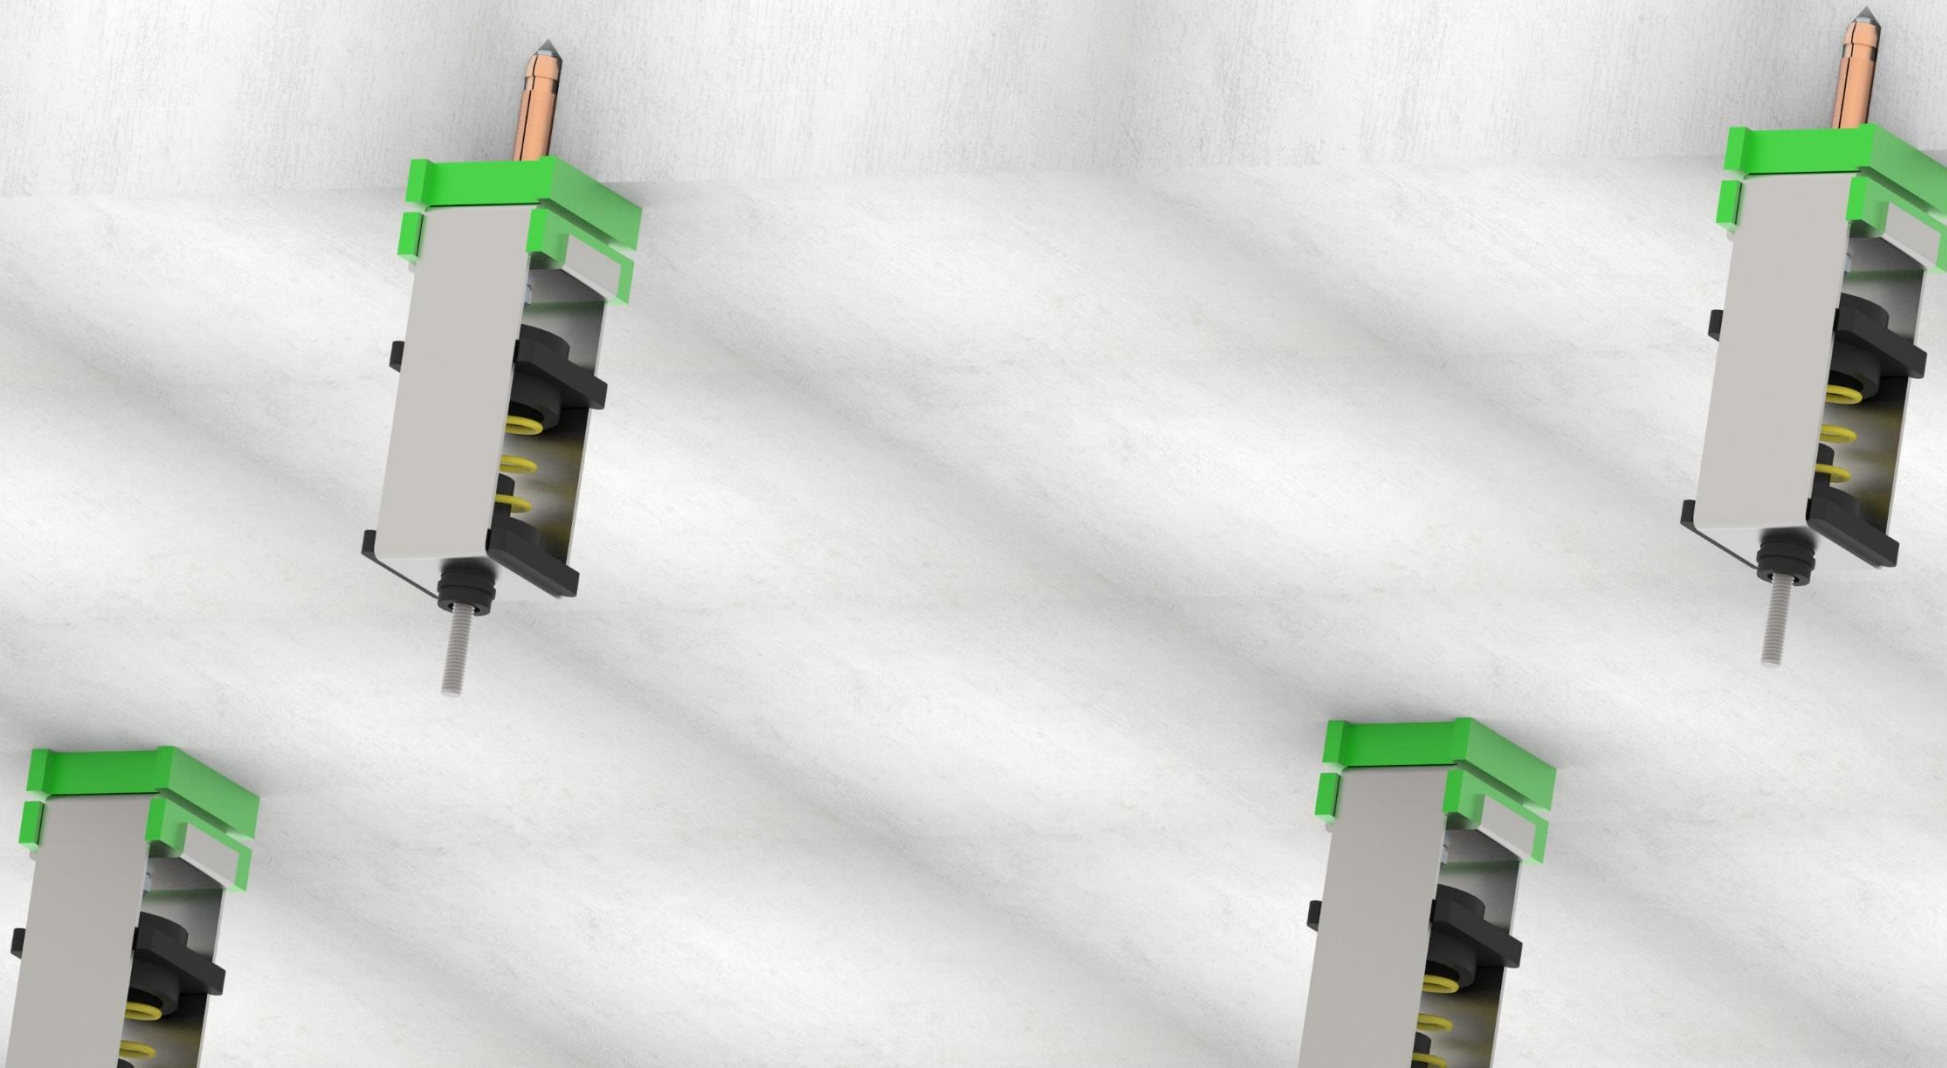


5: CHECK THAT THERE IS A GAP BETWEEN RODS

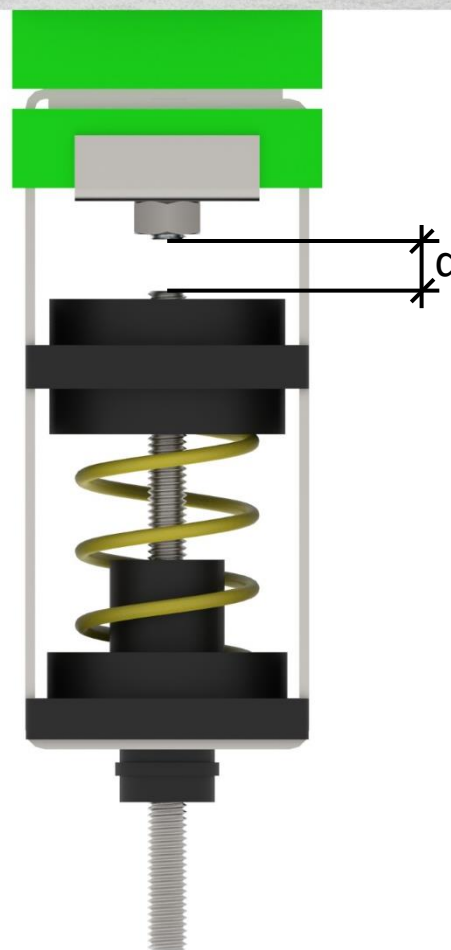

6: FIX THE PROFILES TO THE RODS

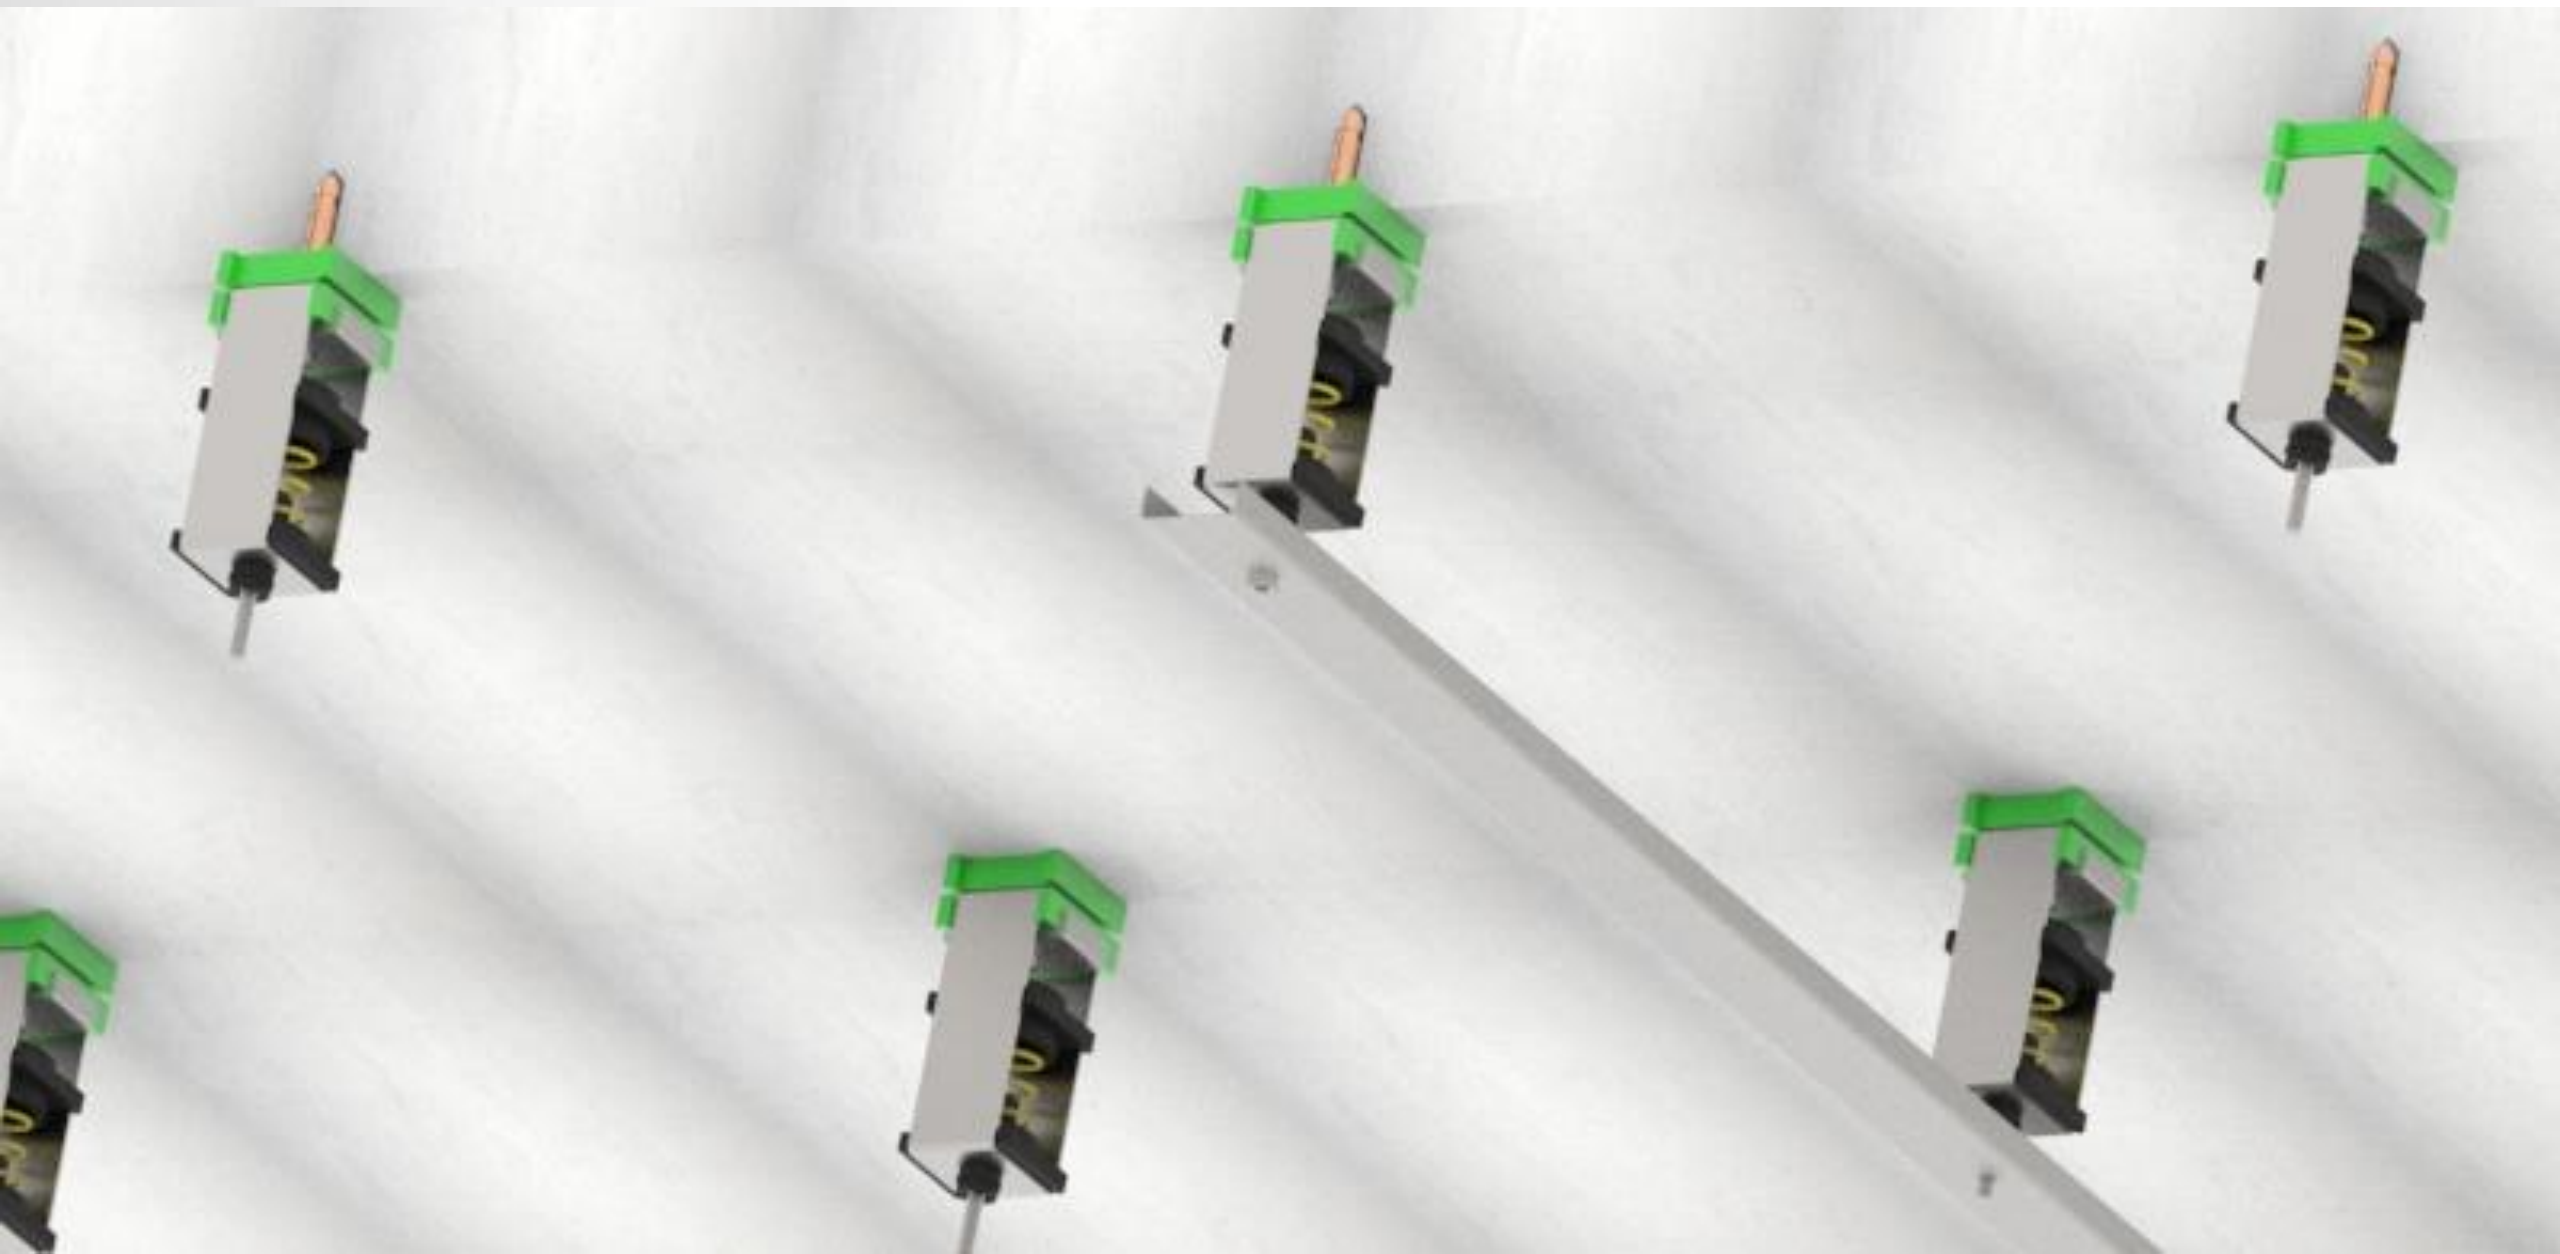

7: CHECK ALL PROFILES ARE CORRECTLY LEVELED

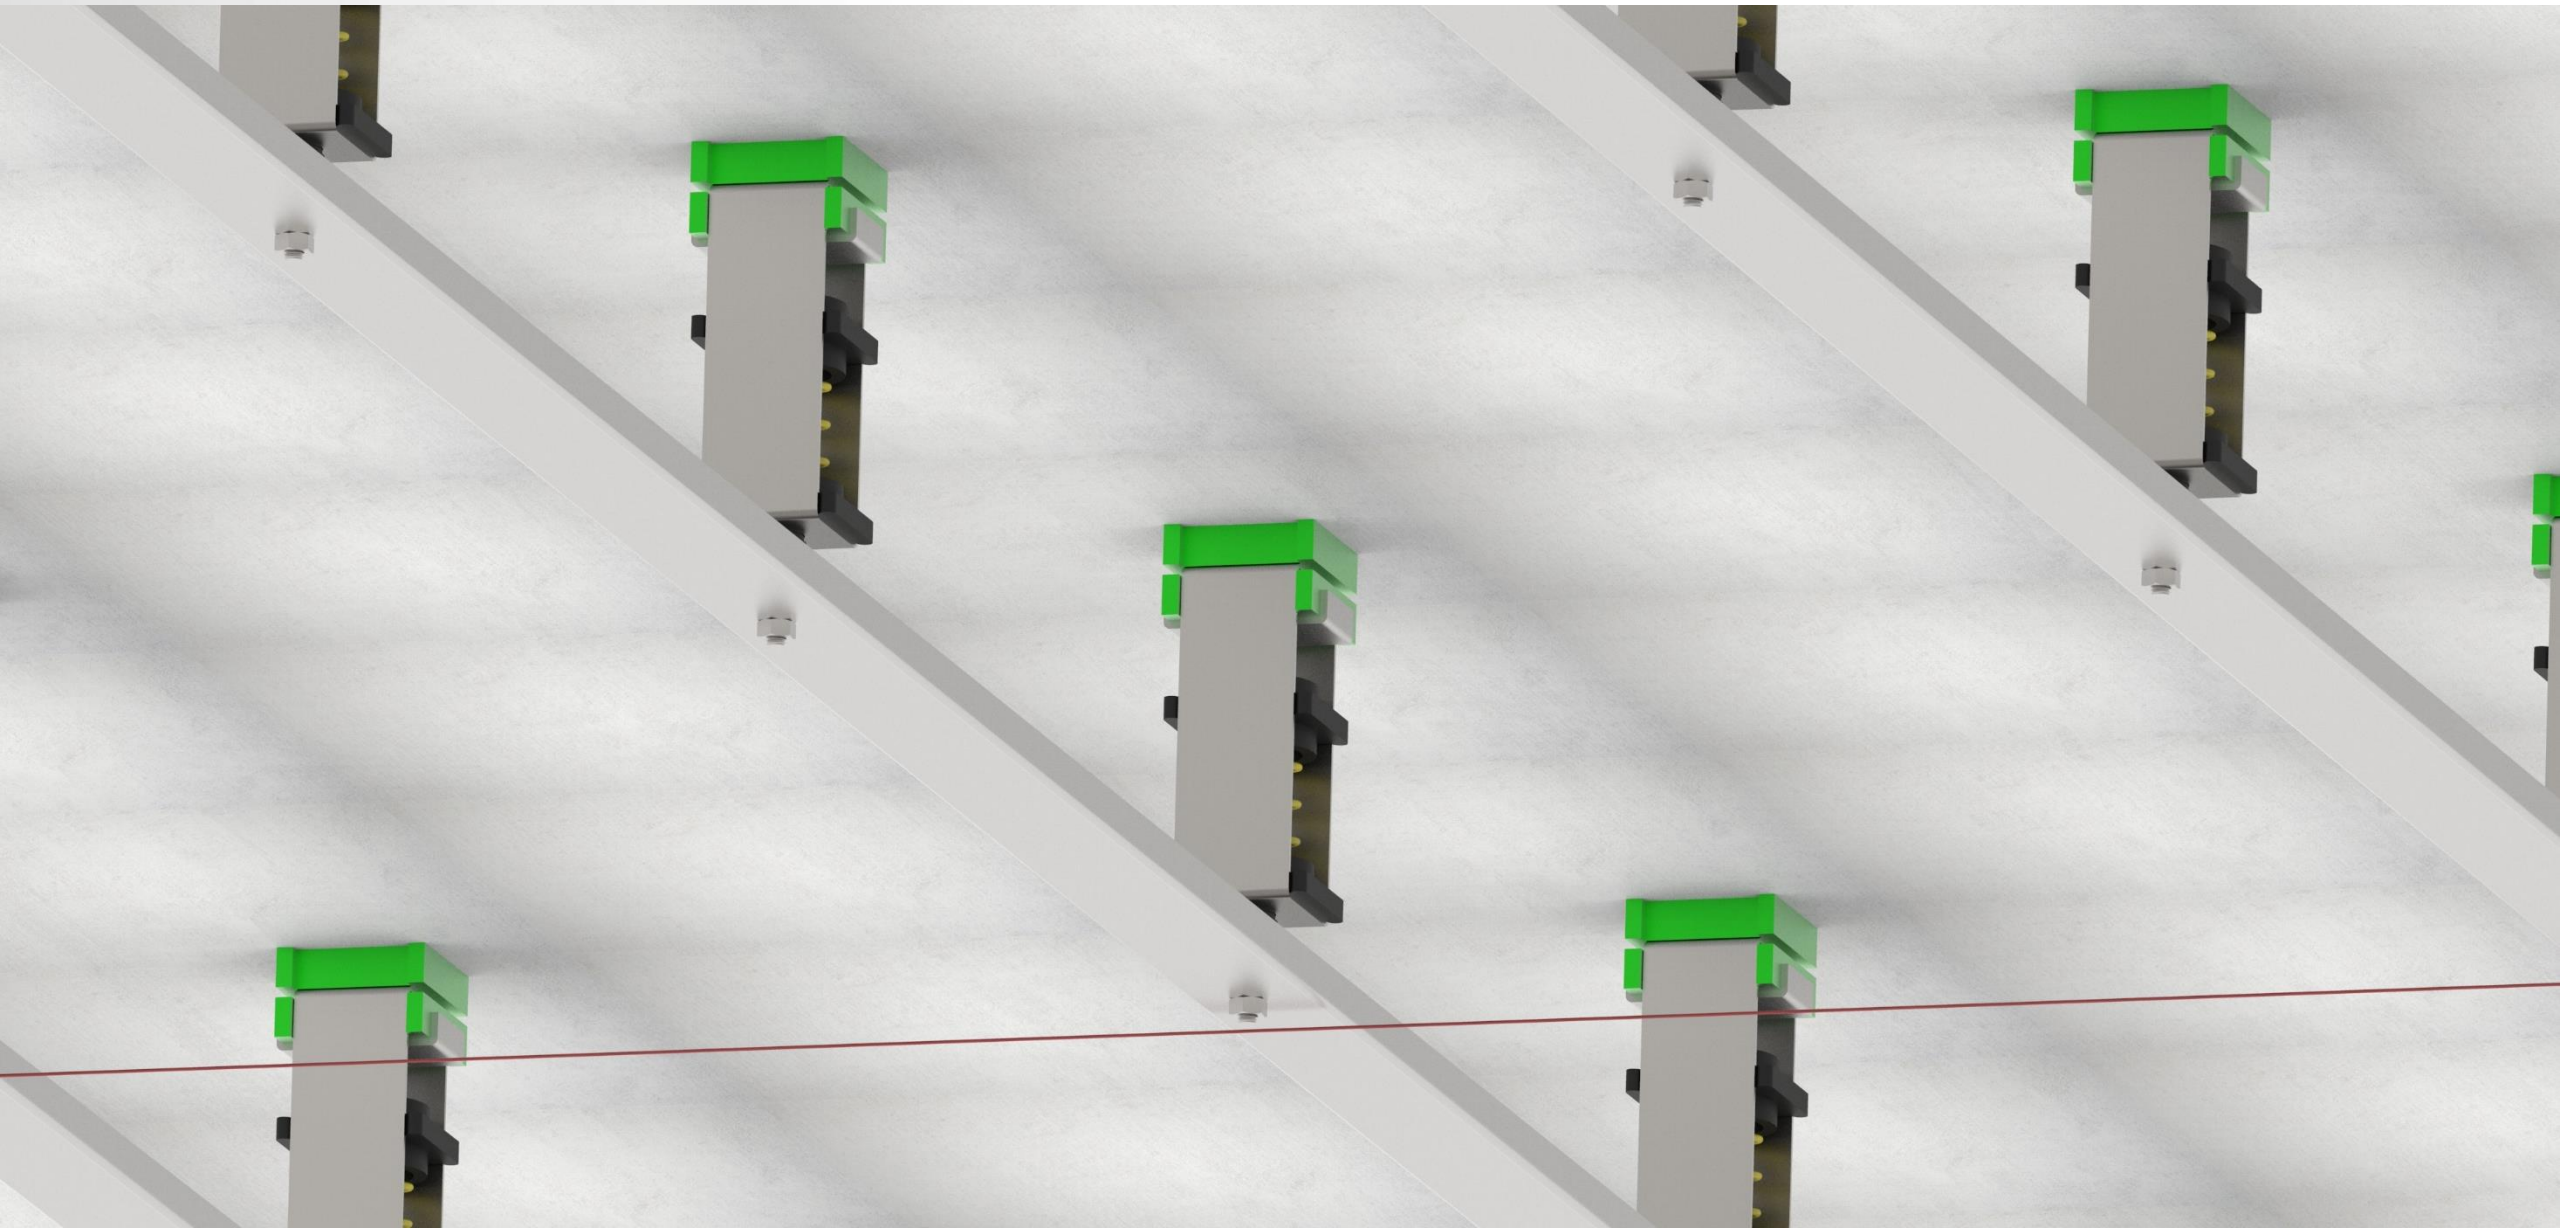


8: ADD THE TRANSVERSAL PROFILES




9: FIX ALL PROFILES



10: FIX THE PLASTERBOARD PLATES

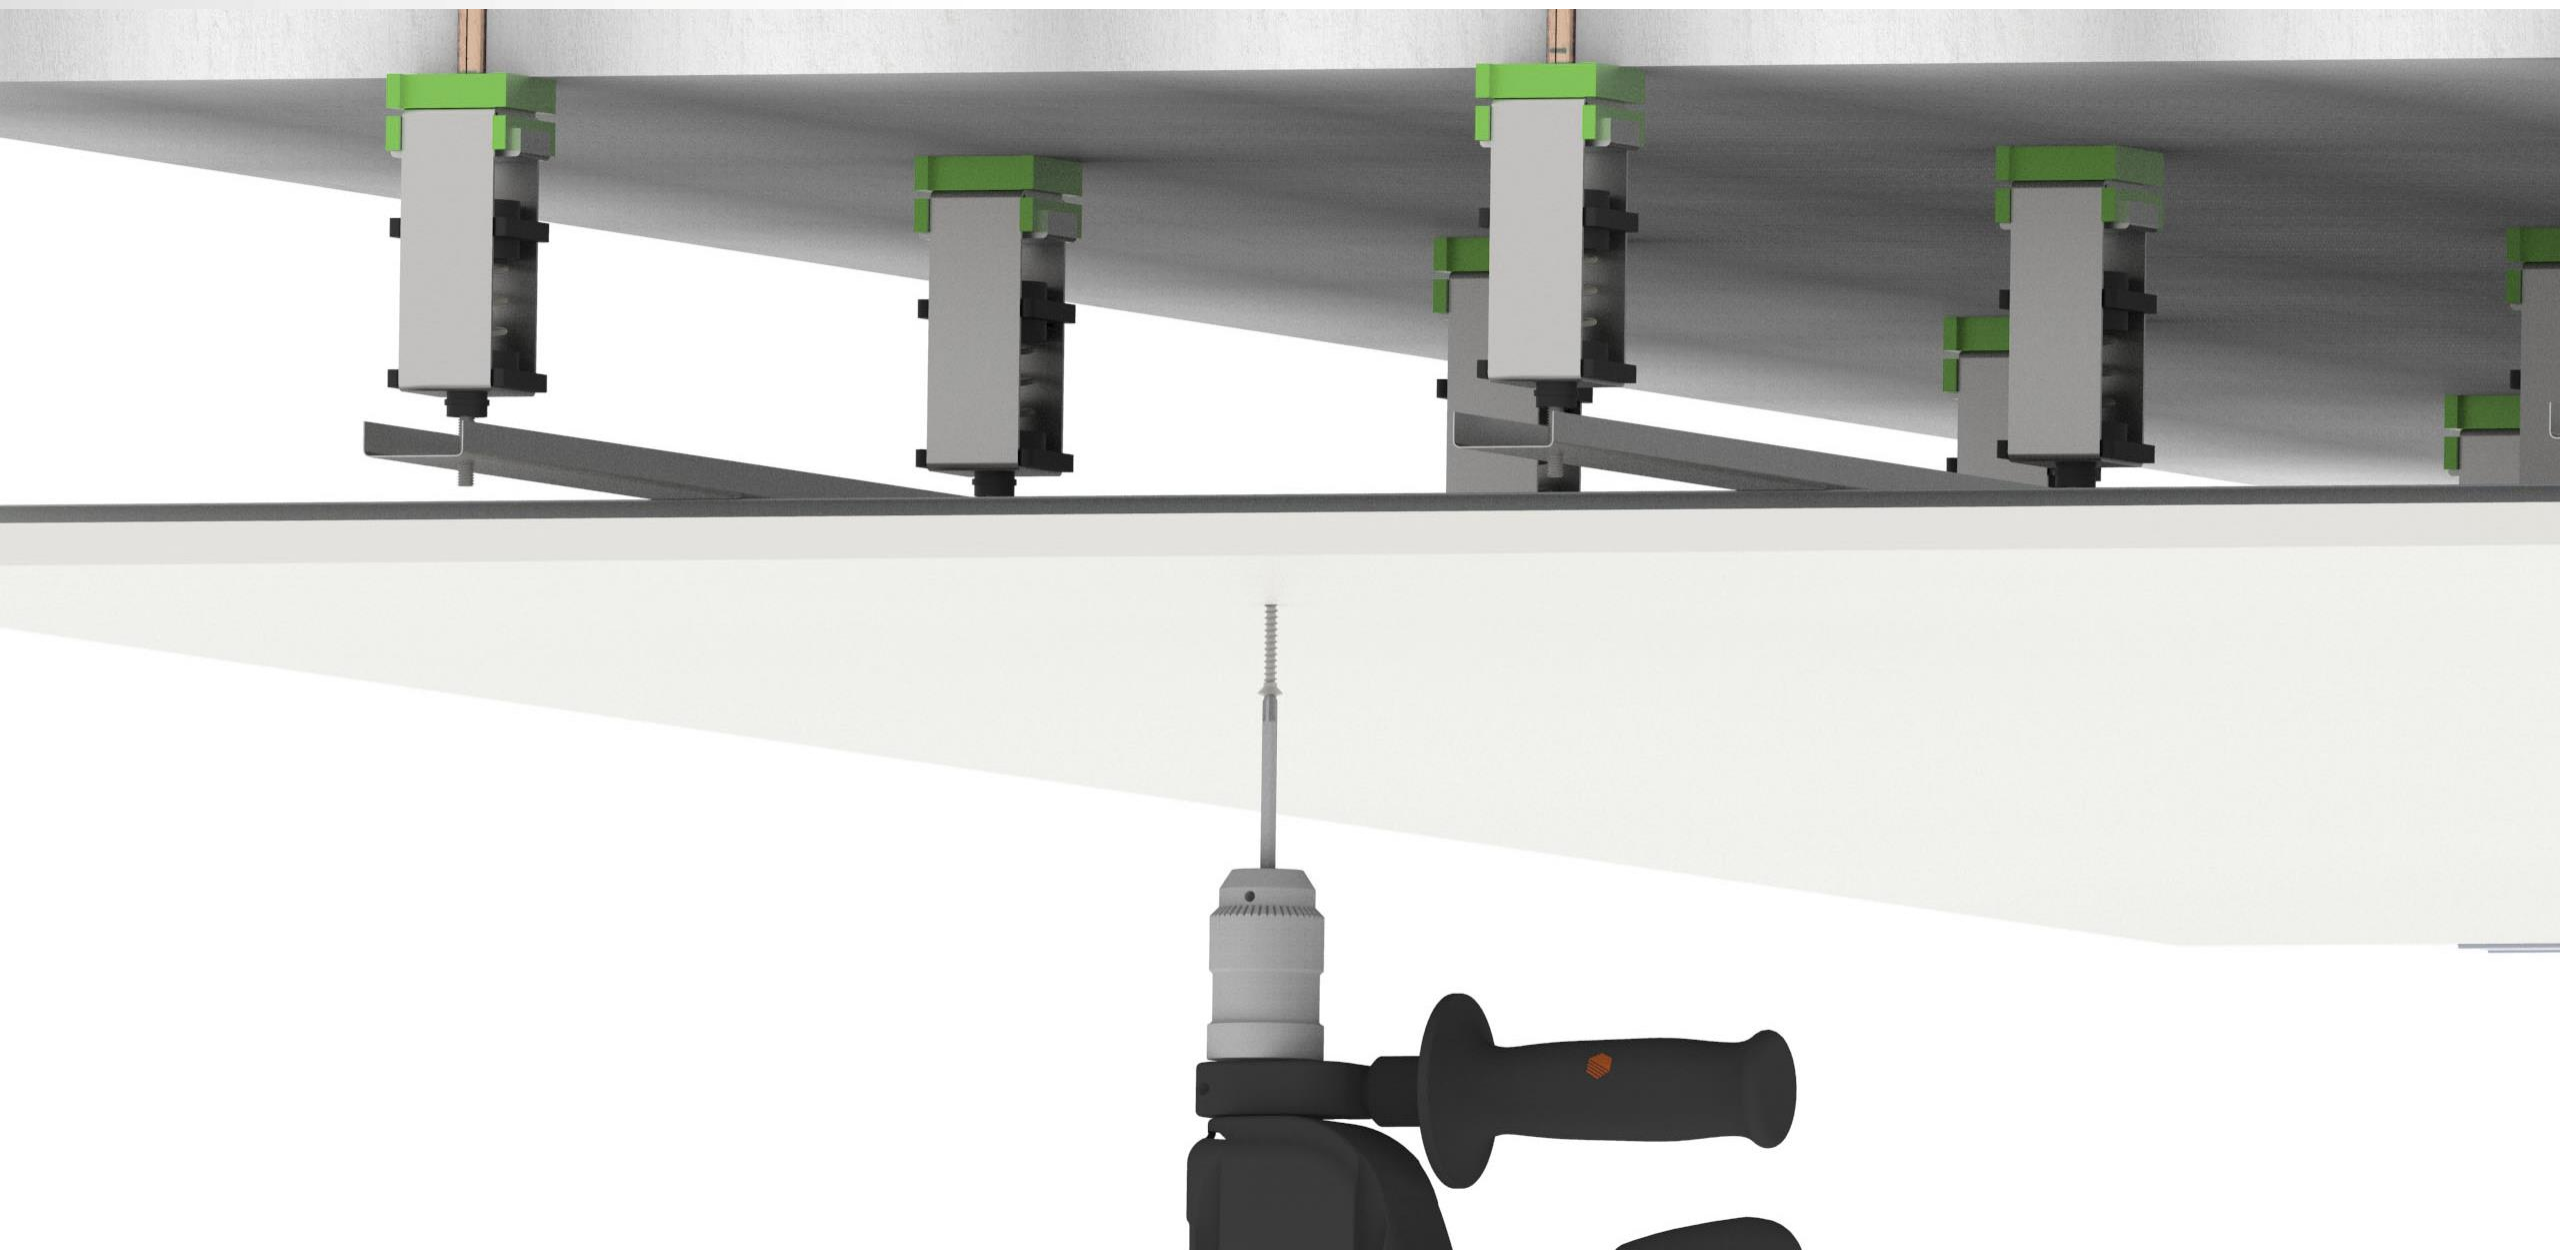

11: ALL PLASTERBOARD PLATES FIXED

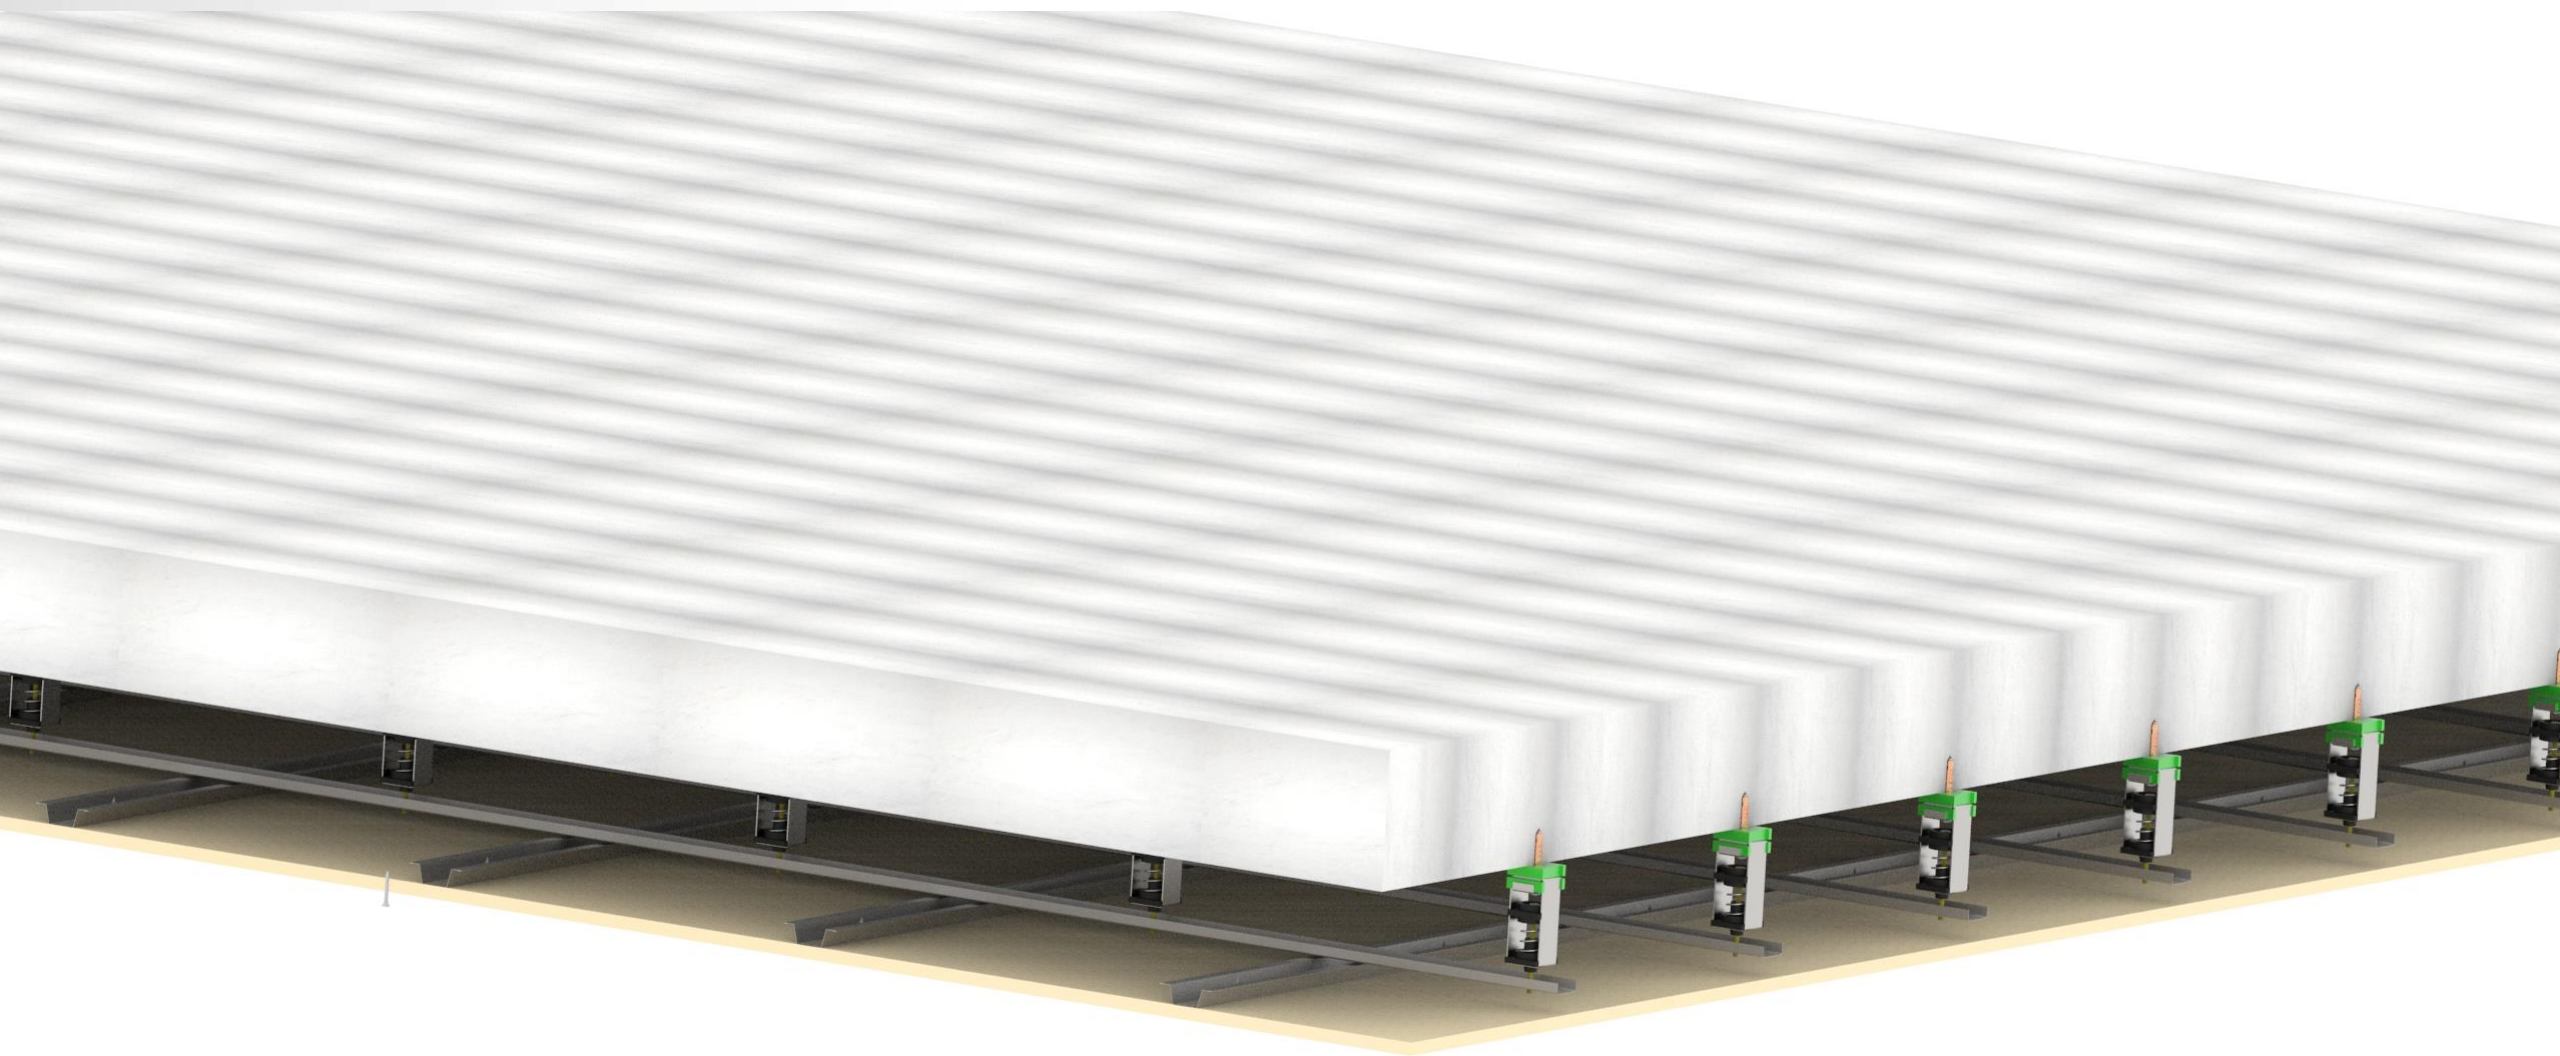

FREE TECHNICAL SUPPORT AVAILABLE UPON REQUEST

